


## DRIVE SHAFT INSPECTION

---

B3E031325500W02

1. Inspect the connections for any looseness.

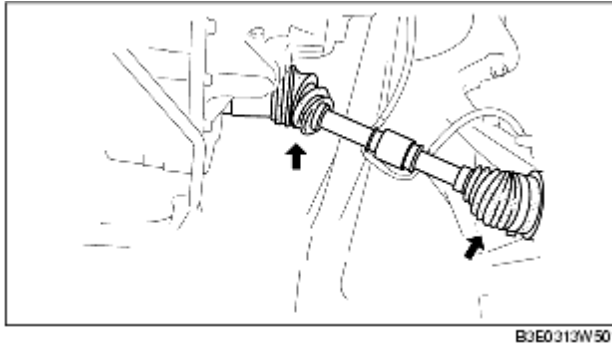

- If there is any malfunction, tighten or replace the applicable part.
2. Inspect the dust boot for damage and cracks.
    - If there is any malfunction, replace the applicable part.
  3. Move the spline and joint up and down, left and right by hand and verify that there is no excessive play.
    - If there is any malfunction, replace the applicable part.