


JOINT SHAFT INSPECTION

B3E031325700W01

1. Verify that there is no torsion or cracks on the joint shaft.
 - If there is any malfunction, replace the joint shaft.
2. Turn the joint shaft by hand and verify that the bearing rotates smoothly.

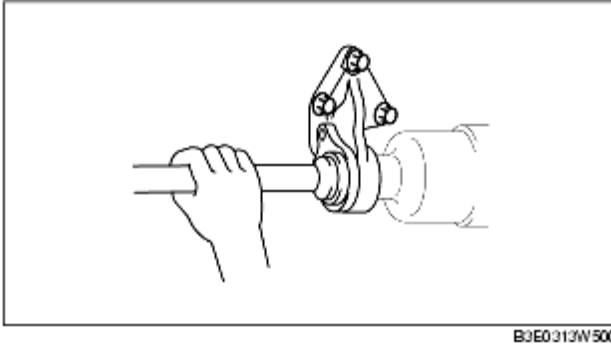

B3E0313W500

- If there is any malfunction, replace the joint shaft.