


## DTC B2741 [DSC]

B3E040243000W15

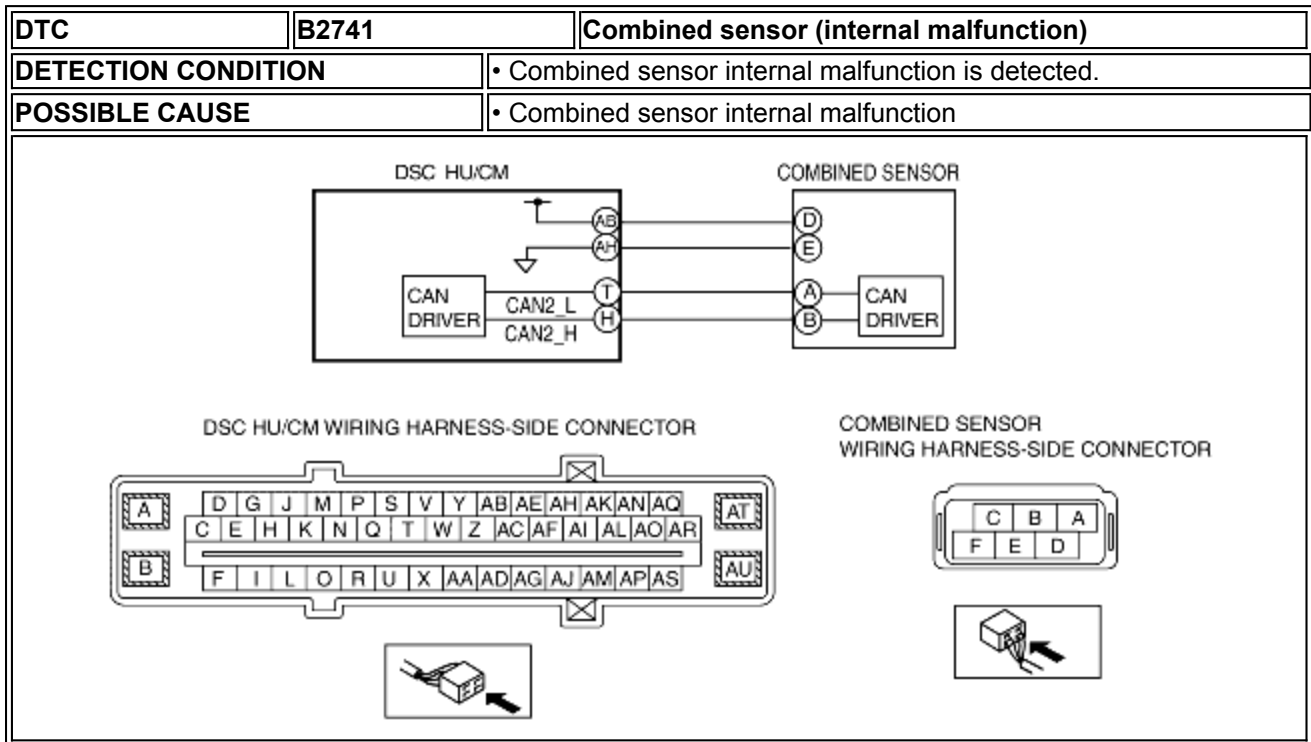

### Diagnostic procedure

STEP	INSPECTION	ACTION
1	<b>VERIFY COMBINED SENSOR MALFUNCTION</b> <ul style="list-style-type: none"> <li>Clear the DTCs from the memory. (See <a href="#">Clearing DTCs Procedures.</a>)</li> <li>Are the same DTCs present?</li> </ul>	Yes Replace the combined sensor, then go to the next step. (See <a href="#">COMBINED SENSOR REMOVAL/INSTALLATION.</a> )
		No Go to the next step.
2	<b>VERIFY THAT NO OTHER DTCs ARE PRESENT</b> <ul style="list-style-type: none"> <li>Are any other DTCs output?</li> </ul>	Yes Go to the applicable DTC inspection. (See <a href="#">DTC Table.</a> )
		No DTC troubleshooting completed.