

NO.7 THERE IS MALFUNCTION IN THE SYSTEM EVEN THOUGH ABS WARNING LIGHT, BRAKE SYSTEM WARNING LIGHT, DO NOT ILLUMINATE

B3E040367650W11

7	There is a malfunction in system even though ABS warning light, BRAKE system warning light, do not illuminate.
[TROUBLESHOOTING HINTS]	
• There is a difference in size or air pressure between the front and rear tires.	

Diagnostic procedure

STEP	INSPECTION		ACTION
1	INSPECT FOR DTCs IN ABS HU/CM Have DTCs been stored in memory?	Yes	Perform the applicable DTC inspection. (See DTC Table .)
		No	Go to the next step.
2	INSPECT ABS HYDRAULIC UNIT Perform the ABS hydraulic unit system inspection. Is the system normal?	Yes	Inspect the conventional brake system.
		No	If the wheels do not rotate: Replace the ABS HU/CM. (See ABS HU/CM REMOVAL/INSTALLATION .) If the wheels rotate but order in which wheels rotate is incorrect: Inspect the brake pipe passage to the ABS HU/CM.