

## NO.8 ANY OF THE FOLLOWING LIGHTS DO NOT ILLUMINATE WHEN THE IGNITION SWITCH IS TURNED TO THE ON POSITION: (ABS WARNING LIGHT, BRAKE SYSTEM WARNING LIGHT, DSC INDICATOR LIGHT AND/OR DSC OFF LIGHT)

B3E040367650W12

8	Any of the following lights do not illuminate when the ignition switch is turned to the ON position: (ABS warning light, BRAKE system warning light, DSC indicator light and/or DSC OFF light).
[TROUBLESHOOTING HINTS]	
<ul style="list-style-type: none"> <li>• Inspect each light in the instrument cluster for malfunction.</li> <li>• Poor connection at DSC HU/CM connector</li> </ul>	

### Diagnostic procedure

STEP	INSPECTION	ACTION
1	<b>INSPECT FOR DTCs IN DSC HU/CM</b> • Have DTCs been stored in memory?	Yes Perform the applicable DTC inspection. (See <a href="#">DTC Table.</a> )
		No Go to the next step.
2	<b>INSPECT IF MALFUNCTION IS IN INSTRUMENT CLUSTER SYSTEM OR OTHER SYSTEM</b> • Do other warning and indicator lights illuminate when the ignition switch is turned to the ON position?	Yes Go to the next step.
		No Inspect or repair the instrument cluster (power supply system, ground system).
3	<b>VERIFY THAT DSC HU/CM CONNECTOR IS CONNECTED</b> • Is the DSC HU/CM connector securely connected?	Yes Go to the next step.
		No Connect the DSC HU/CM connector securely, then go to the next step.
4	<b>VERIFY THAT DSC HU/CM CONNECTOR TERMINAL OR RELATED CONNECTOR TERMINALS ARE CONNECTED</b> • Are the DSC HU/CM connector terminal, instrument cluster connector terminal, or related connector terminals securely connected?	Yes Replace the DSC HU/CM. (See <a href="#">DSC HU/CM REMOVAL/INSTALLATION.</a> )
		No Connect the DSC HU/CM connector terminal or related connector terminal securely.