

NO.10 THERE IS A MALFUNCTION IN THE SYSTEM EVEN THOUGH ABS WARNING LIGHT, BRAKE SYSTEM WARNING LIGHT, DSC INDICATOR LIGHT AND DSC OFF LIGHT DO NOT ILLUMINATE

B3E040367650W14

10	There is a malfunction in the system even though ABS warning light, BRAKE system warning light, DSC indicator light and DSC OFF light do not illuminate.
[TROUBLESHOOTING HINTS]	
• There is a mechanical malfunction in the system.	

Diagnostic procedure

STEP	INSPECTION	ACTION
1	INSPECT FOR DTCs IN DSC HU/CM • Have DTCs been stored in memory?	Yes Perform the applicable DTC inspection. (See DTC Table .)
		No Go to the next step.
2	INSPECT DSC SYSTEM • Perform the DSC system inspection. • Is the system normal?	Yes Inspect the conventional brake system.
		No Repair or replace the malfunctioning part.