

NO.12 DSC*2 OPERATES FREQUENTLY/DSC DOES NOT WORK CORRECTLY *2 : DSC INDICATOR LIGHT GOES ON AND OUT WHILE DSC OPERATES

B3E040367650W16

12	<p>DSC (*2) operates frequently. /DSC does not work correctly.</p> <p>(*2): DSC indicator light goes on and off while DSC operates.</p>
<p>[TROUBLESHOOTING HINTS]</p> <ul style="list-style-type: none"> • DSC HU/CM detected a malfunction (input and output device malfunction). • Poor installation of combined sensor and/or steering angle sensor. <p>(If any of the above sensors are poorly installed, DSC may operate intermittently.)</p> <ul style="list-style-type: none"> • Initialization was not performed for combined sensor, brake fluid pressure sensor when replacing DSC HU/CM, combined sensor. <p>(If initialization is not performed correctly, DSC may not work correctly.)</p>	

Diagnostic procedure

STEP	INSPECTION	ACTION
1	INSPECT FOR DTCs IN DSC HU/CM • Have DTCs been stored in memory?	Yes Perform the applicable DTC inspection. (See DTC Table.)
		No Go to the next step.
2	VERIFY THAT EACH SENSOR IS INSTALLED • Are the combined sensor and steering angle sensor securely installed?	Yes Go to the next step.
		No Install the malfunctioning sensor securely.
*3	VERIFY THAT EACH SENSOR IS INITIALIZED • Did each sensor initialize after replacement of DSC HU/CM, combined sensor?	Yes Find malfunctioning part according to "INTERMITTENT CONCERN TROUBLESHOOTING."
		No Perform initialization procedure. (See COMBINED SENSOR INITIALIZATION PROCEDURE.) (See BRAKE FLUID PRESSURE SENSOR INITIALIZATION PROCEDURE.)