


CONVENTIONAL BRAKE SYSTEM LOCATION INDEX

B3E041100000W01

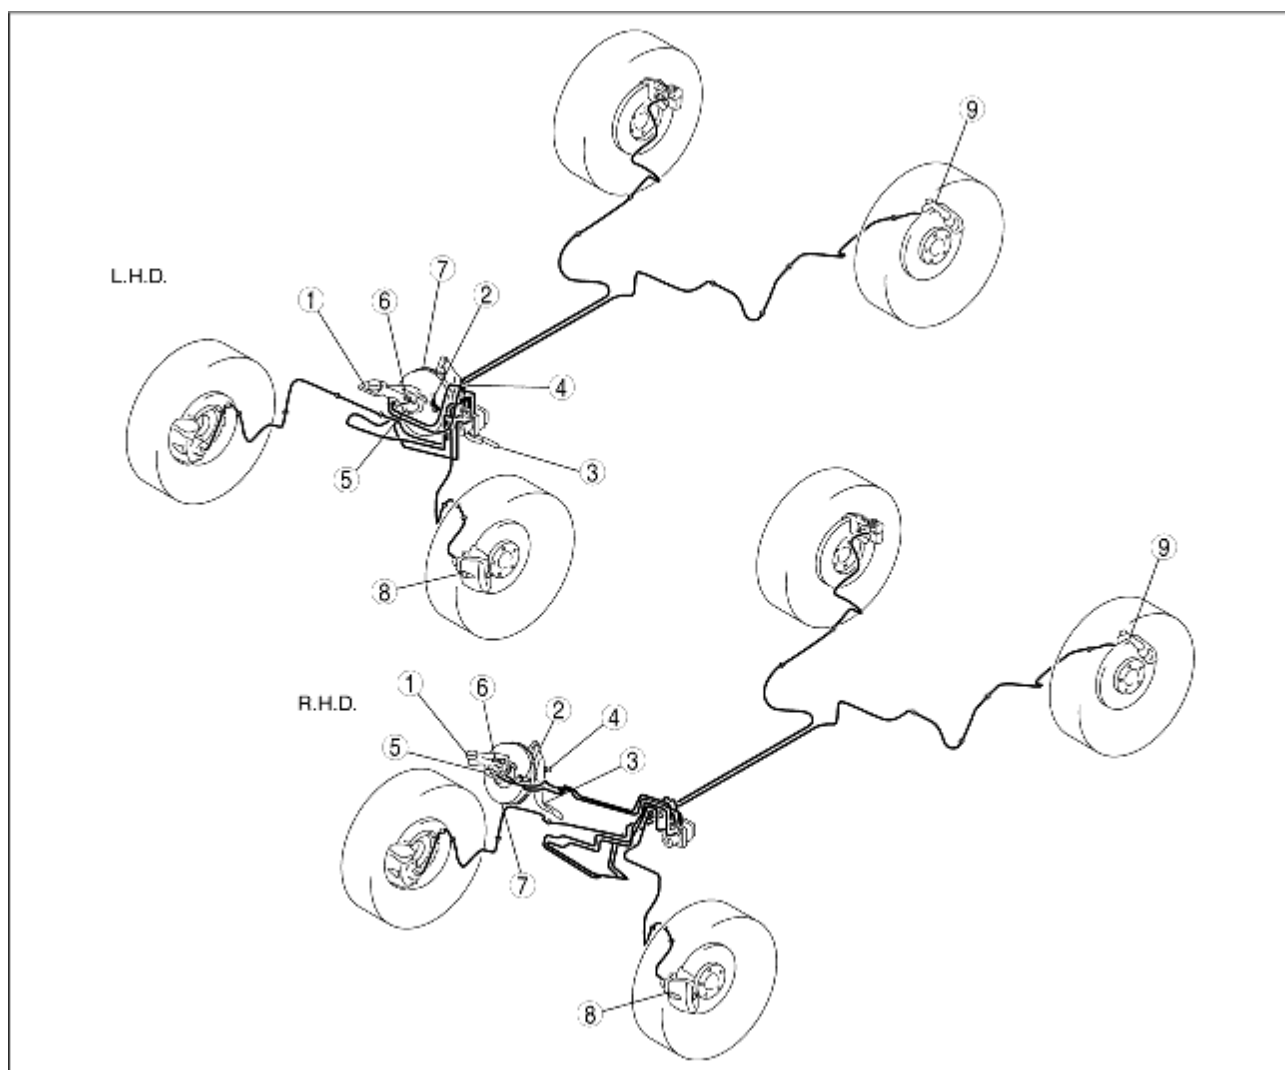

B3E0411W101

1	Brake fluid (See AIR BLEEDING.)
2	Vacuum line (See VACUUM LINE INSPECTION.) (See VACUUM HOSE REMOVAL/INSTALLATION.)
3	Brake pedal (See BRAKE PEDAL INSPECTION.) (See BRAKE PEDAL REMOVAL/INSTALLATION.)
4	Brake switch (See BRAKE SWITCH INSPECTION.)
5	Master cylinder (See MASTER CYLINDER REMOVAL/INSTALLATION.)
6	Brake fluid level sensor (See BRAKE FLUID LEVEL SENSOR INSPECTION.)

7	Power brake unit (See POWER BRAKE UNIT INSPECTION.) (See POWER BRAKE UNIT REMOVAL/INSTALLATION (L.H.D.).) (See POWER BRAKE UNIT REMOVAL/INSTALLATION (R.H.D.).)
8	Front brake (disc) (See FRONT BRAKE (DISC) INSPECTION.) (See FRONT BRAKE (DISC) REMOVAL/INSTALLATION.) (See DISC PAD (FRONT) REPLACEMENT.) (See CALIPER (FRONT) DISASSEMBLY/ASSEMBLY.)
9	Rear brake (disc) (See REAR BRAKE (DISC) INSPECTION.) (See REAR BRAKE (DISC) REMOVAL/INSTALLATION.) (See DISC PAD (REAR) REPLACEMENT.) (See CALIPER (REAR) DISASSEMBLY/ASSEMBLY.)