


# CALIPER (REAR) DISASSEMBLY/ASSEMBLY

B3E041126990W02

1. Disassemble in the order indicated in the table.

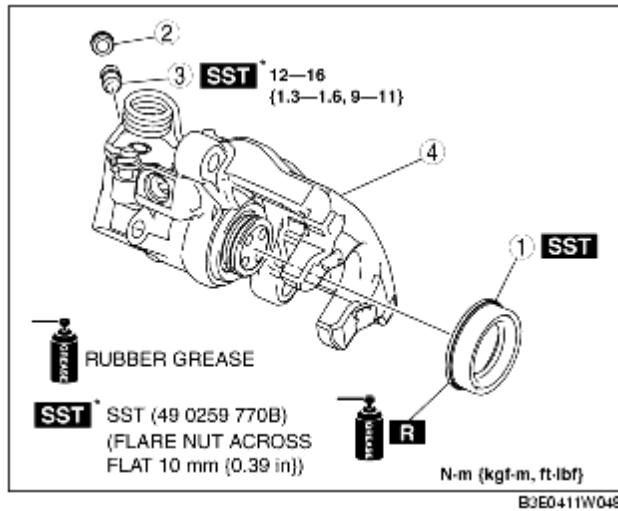


1	Dust seal (See <a href="#">Dust Seal Assembly Note</a> .)
2	Bleeder cap
3	Bleeder screw
4	Caliper body


2. Assemble in the reverse order of disassembly.

## Dust Seal Assembly Note


1. While rotating the piston counterclockwise using the **SST**, pull it out to the position shown in the figure.

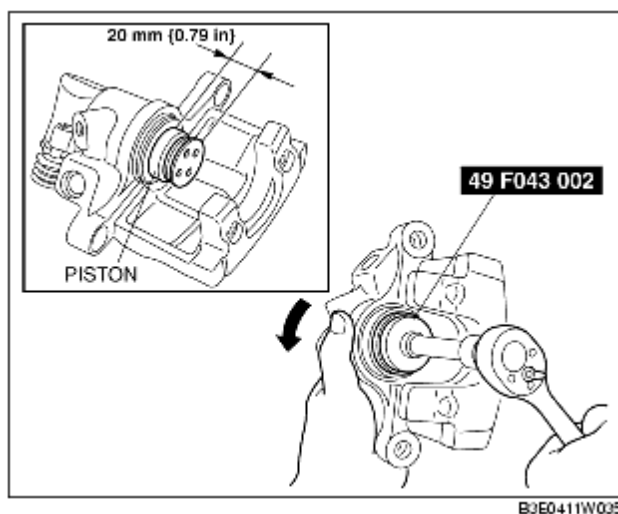

2. As shown in the figure, assemble a new dust seal on the piston, and rotate the piston clockwise slowly using the **SST** to insert it to the caliper body completely.

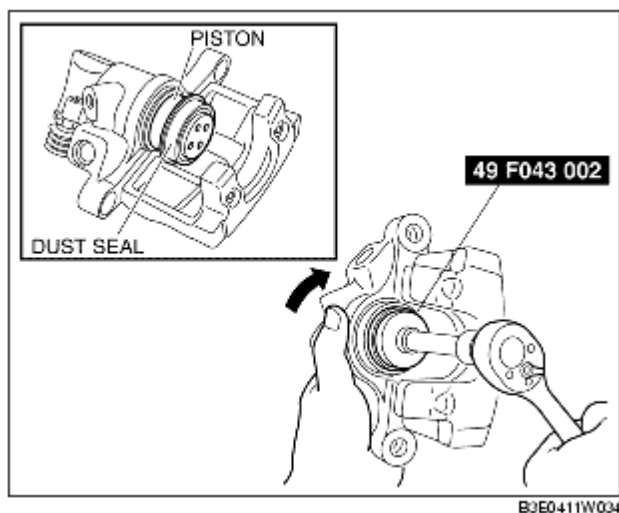

3. Assemble the dust seal to the caliper body using the **SSTs** and a press with a press-in force of **834 N {85 kgf, 187 in·lbf}**

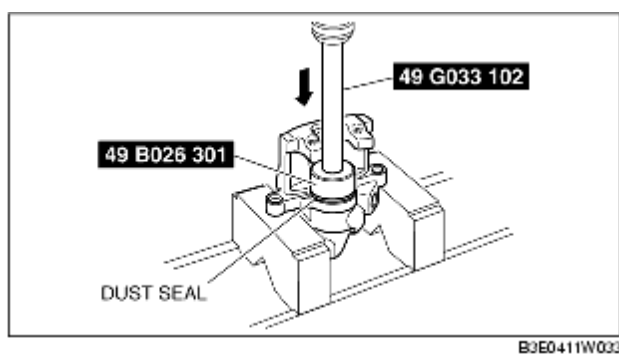

4. Verify that there is no gap between the dust seal and caliper body.