


BRAKE FLUID LEVEL SENSOR INSPECTION

B3E041143540W02

1. Disconnect the brake fluid level sensor connector from the master cylinder.
2. Inspect for continuity according to fluid level between the brake fluid level sensor terminals.

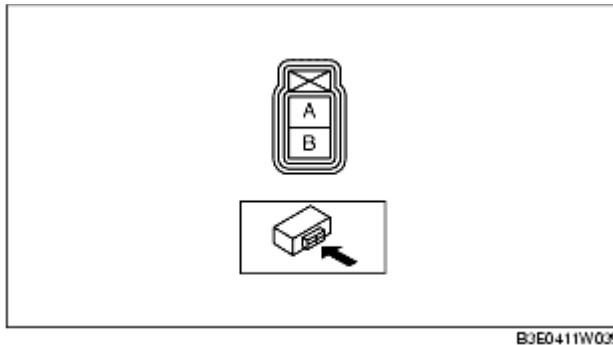

B3E0411W039

- If not as indicated in the table, replace the reserve tank.

Condition	Terminal	
	A	B
Above MIN	○	○
Below MIN		

B3E0411W105