


BRAKE SWITCH INSPECTION

B3E041166490W02

Caution

- Inspect the brake switch with it installed to the brake pedal, otherwise the brake switch may not operate normally. If the brake switch is removed from the brake pedal, replace the brake switch with a new one.

1. Remove the lower panel.
2. Remove the column cover.
3. Disconnect the brake switch connector.
4. Verify that the continuity is as indicated in the table.

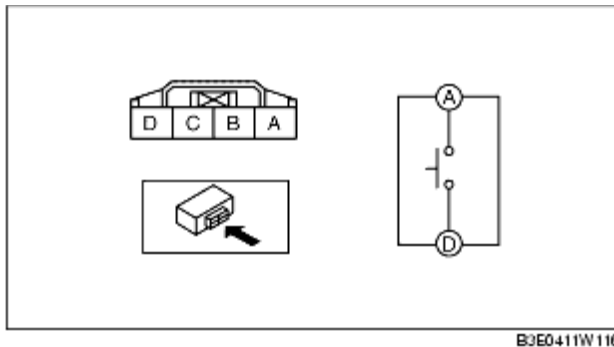

- If not as indicated in the table, replace the brake switch.

Condition	Terminal			
	A	B	C	D
When the brake pedal is depressed	○			○
When the brake pedal is not depressed				

○—○ : Continuity

B3E0411W032