


# PARKING BRAKE LEVER INSPECTION

---

B3E041244300W04

## Stroke Inspection

1. Pump the brake pedal a few times.
2. Pull the parking brake lever two to three times.
3. Inspect the parking brake stroke by slowly pulling at point A **50 mm {1.97 in}** from the end of the parking brake lever with a force of **98 N {10 kgf, 22 lbf}** and counting the number of notches (clicking sound).

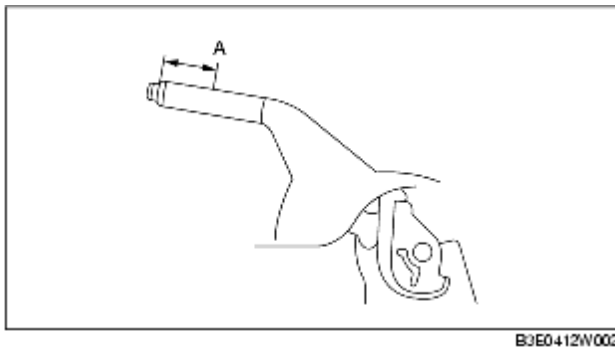

B3E0412W002

- If not within the specification, adjust the parking brake lever.

**Standard**  
**3-6 notches**