


ABS SYSTEM WIRING DIAGRAM

B3E041343000T03

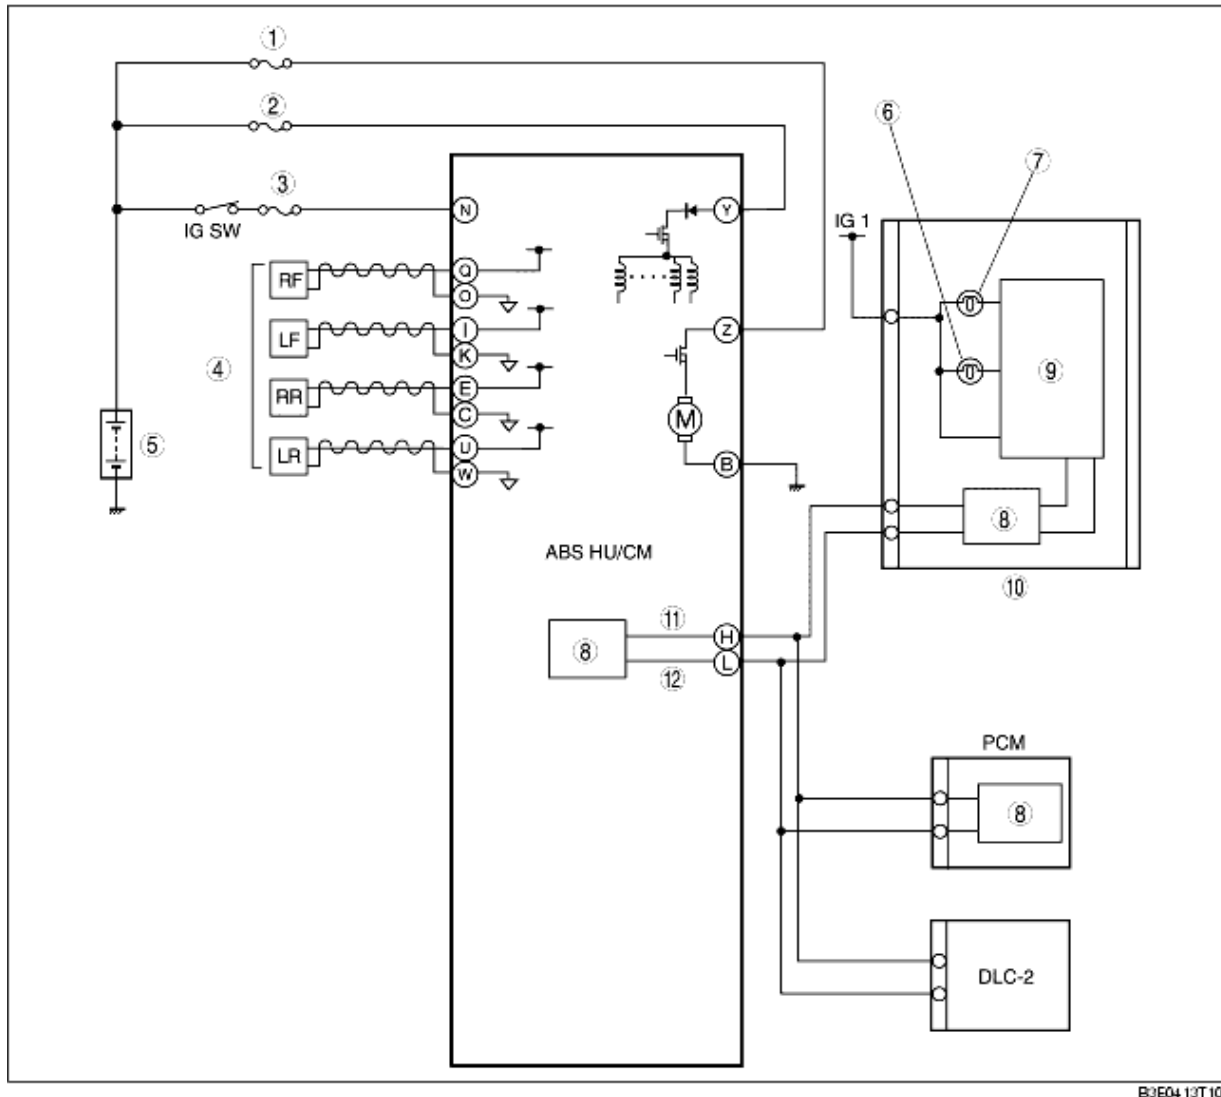

B3E04 13T101

1	ABS 1 30A fuse
2	ABS 2 20A fuse
3	ABS IG 10A fuse
4	ABS wheel-speed sensor
5	Battery
6	Brake system warning light
7	ABS warning light
8	CAN driver
9	Microcomputer
10	Instrument cluster
11	CAN_H
12	CAN_L