


## ABS LOCATION INDEX

B3E041343000W01

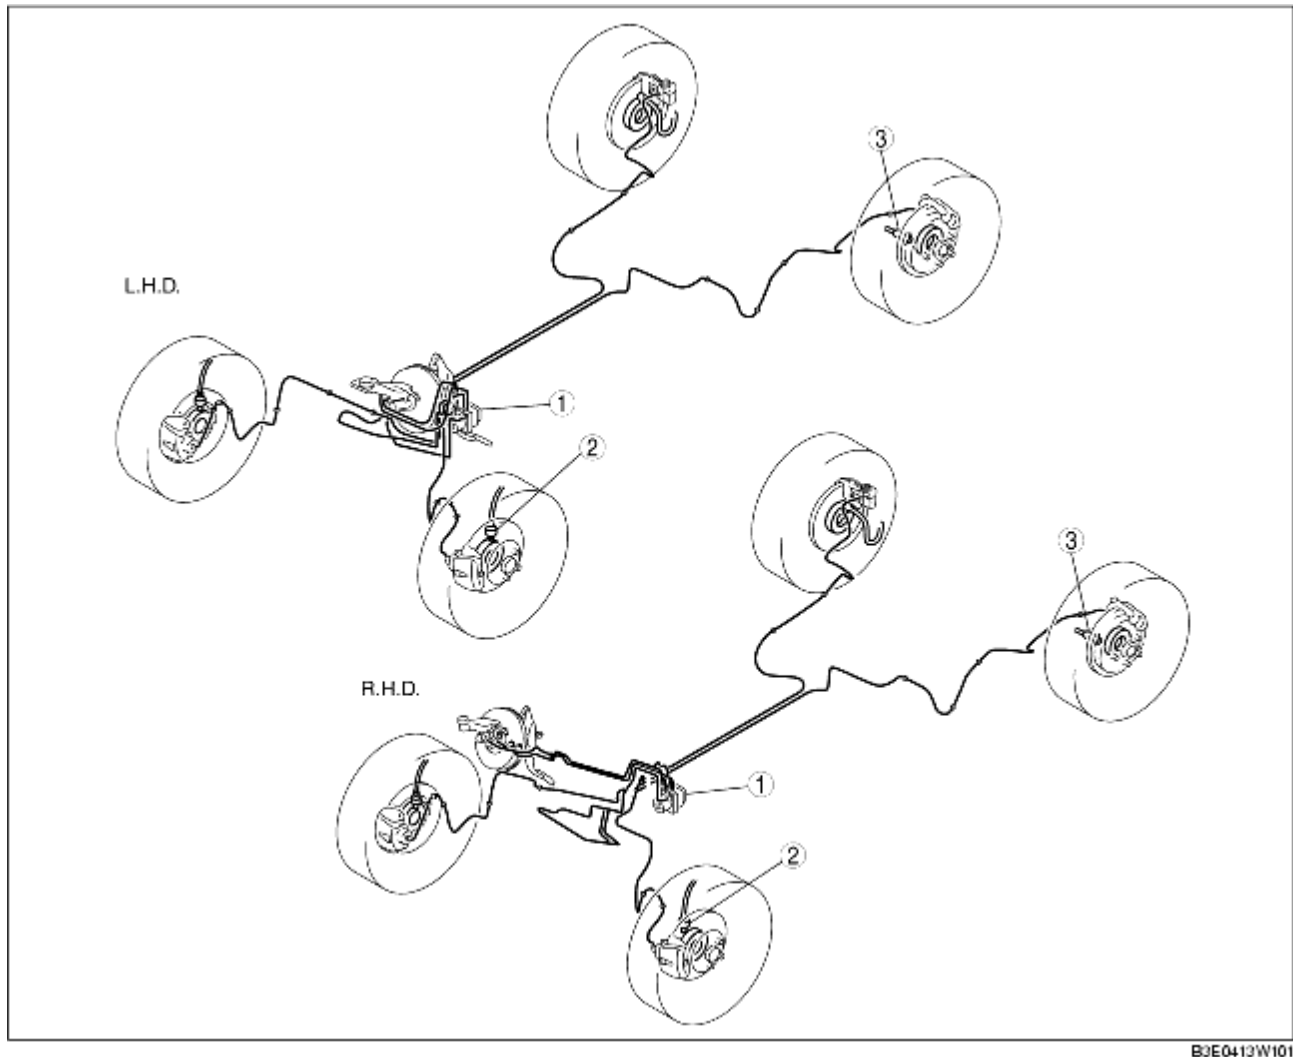

B3E0413W101

1	ABS HU/CM (See <a href="#">ABS SYSTEM INSPECTION.</a> ) (See <a href="#">ABS HU/CM REMOVAL/INSTALLATION.</a> ) (See <a href="#">ABS HU/CM INSPECTION.</a> )
2	Front ABS wheel-speed sensor (See <a href="#">FRONT ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION.</a> ) (See <a href="#">FRONT ABS WHEEL-SPEED SENSOR INSPECTION.</a> )
3	Rear ABS wheel-speed sensor (See <a href="#">REAR ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION.</a> ) (See <a href="#">REAR ABS WHEEL-SPEED SENSOR INSPECTION.</a> )