


REAR ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION

B3E041343710W01

1. Remove the under cover (rear).
2. Remove in the order indicated in the table.
3. Install in the reverse order of removal.

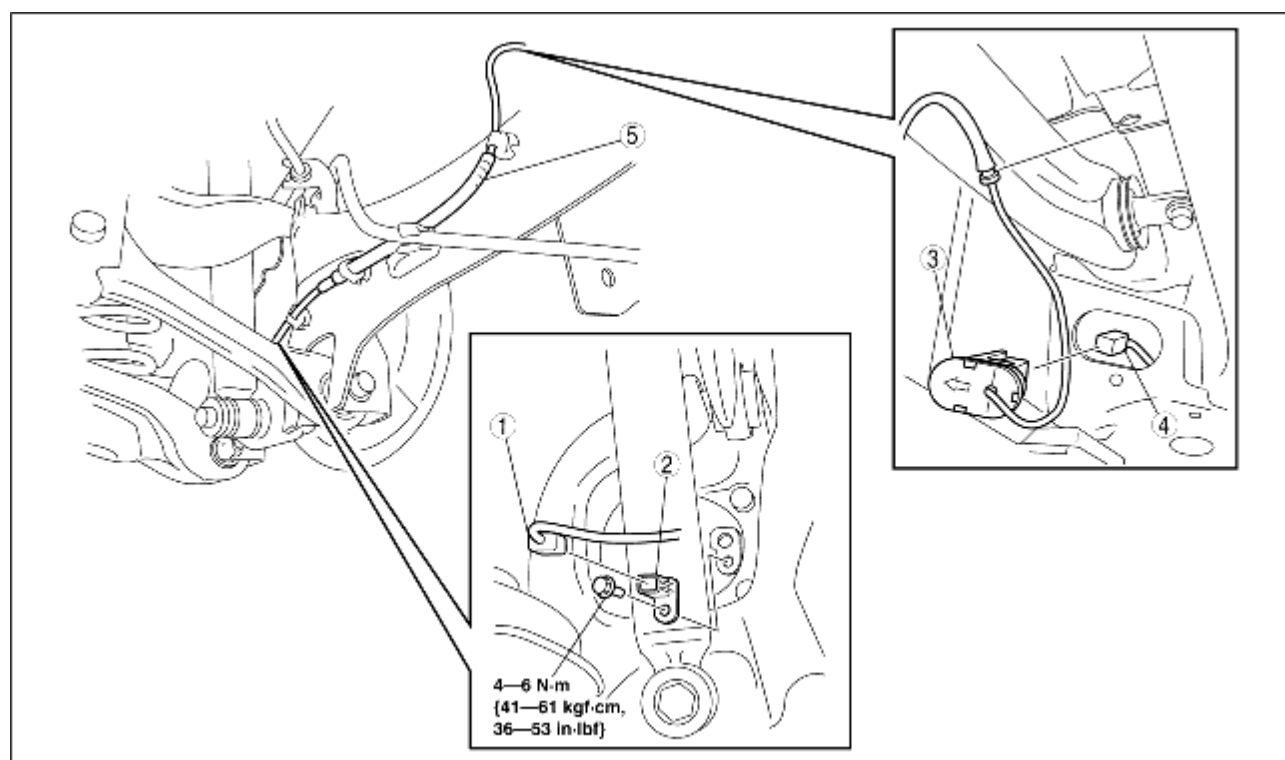

B3E0413W009

1	Connector
2	Rear ABS wheel-speed sensor
3	ABS hole cover (See ABS Hole Cover Removal Note.) (See ABS Hole Cover Installation Note.)
4	Connector
5	Rear ABS wheel-speed sensor wiring harness (See Rear ABS Wheel-speed Sensor Wiring Harness Installation Note.)


ABS Hole Cover Removal Note

1. Disconnect the rear auto leveling sensor connector. (Vehicles with auto leveling sensor)
2. Press the tab of the ABS hole cover to separate the ABS hole cover from the body.

3. Remove the ABS hole cover from the body.

Rear ABS Wheel-speed Sensor Wiring Harness Installation Note

1. Pass the rear ABS wheel-speed sensor wiring harness outside the rear parking brake cable as shown in the figure.

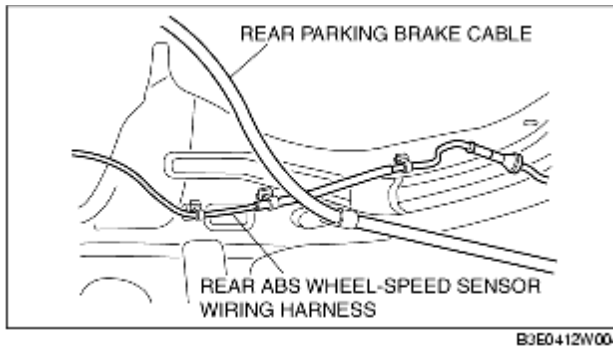

2. Install the rear ABS wheel-speed sensor wiring harness.

ABS Hole Cover Installation Note

1. Install the ABS hole cover into the body so that the arrow on it is facing toward the outer side of the vehicle.

