

ABS WHEEL-SPEED SENSOR AND ABS SENSOR ROTOR FUNCTION

B3E041343720T01

Function

- The ABS wheel-speed sensor and ABS sensor rotor detect the rotation condition of each wheel and transmit this information to the ABS HU/CM.
- The signal from the ABS wheel speed sensor is the primary signal that the ABS HU/CM uses when carrying out control.