


## FRONT ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION

B3E041343720W01

1. Remove the mudguard.
2. Remove in the order indicated in the table.

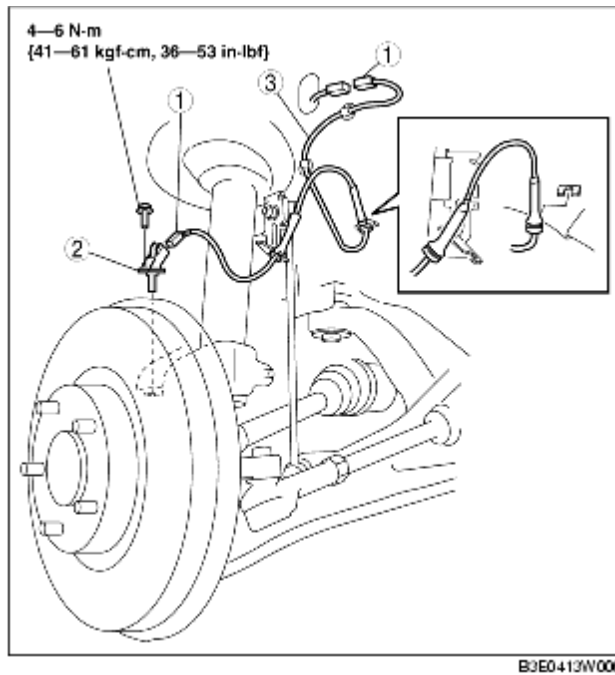

1	Connector
2	Front ABS wheel-speed sensor
3	Front ABS wheel-speed sensor wiring harness

3. Install in the reverse order of removal.