

ABS HU PART FUNCTION

B3E041343750T02

- The ABS HU adjusts the fluid pressure to the caliper pistons by controlling (on/off) each solenoid valve and pump motor according to signals from the ABS CM.