

STEERING ANGLE SENSOR FUNCTION

B3E041543000T06

- The steering angle sensor, located on the clock spring, detects the steering angle and transmits it to the DSC HU/CM.