


DSC LOCATION INDEX

B3E041543000W01

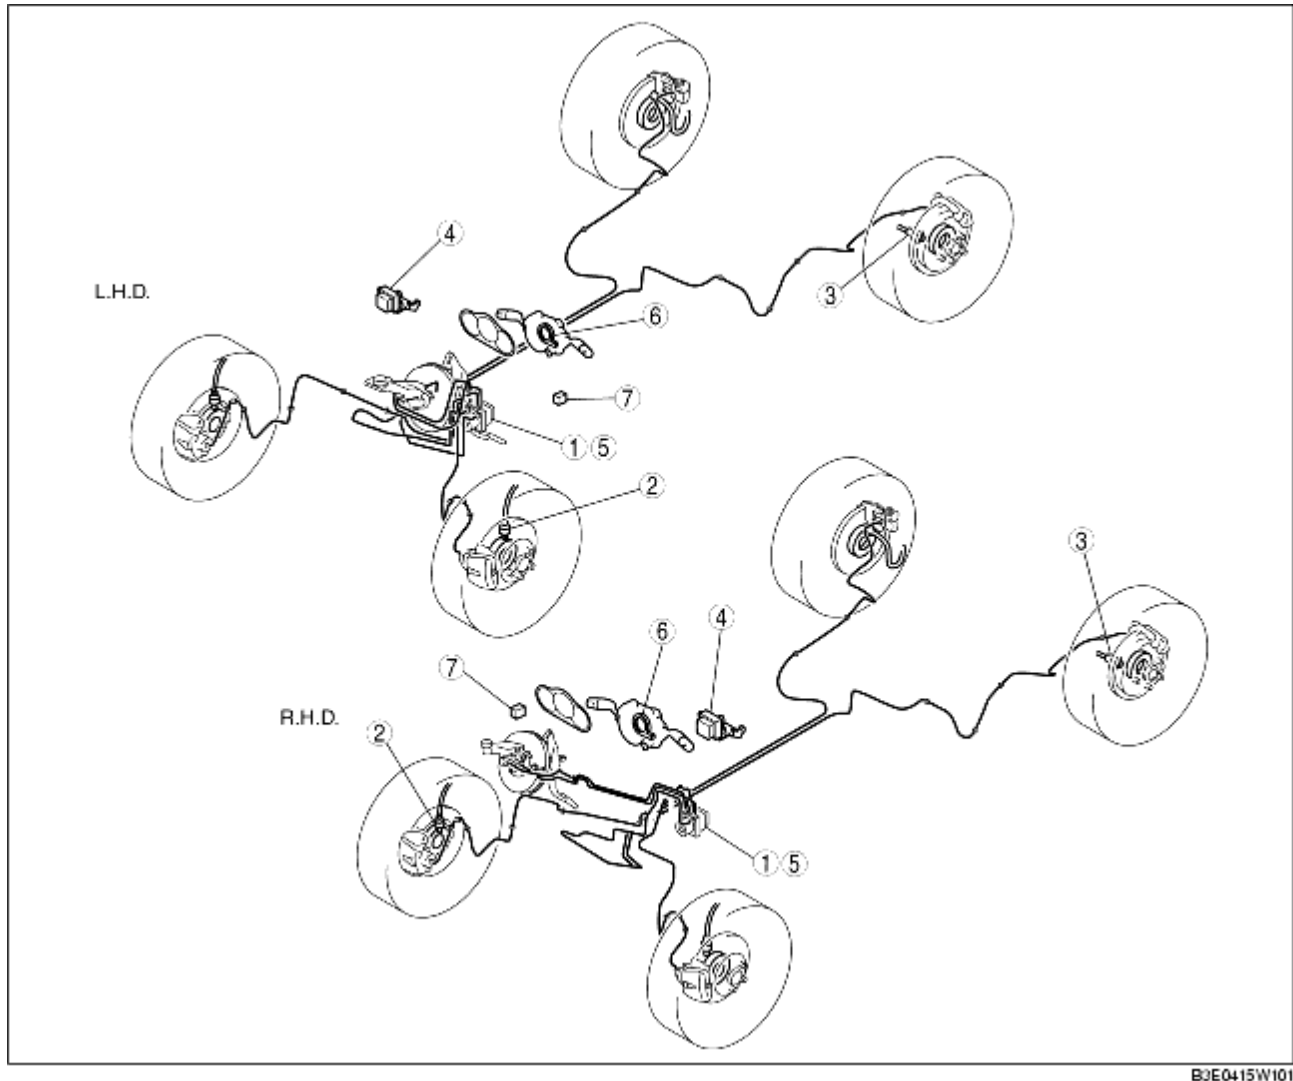

1	DSC HU/CM (See DSC SYSTEM INSPECTION.) (See DSC HU/CM REMOVAL/INSTALLATION.) (See DSC HU/CM INSPECTION.)
2	Front ABS wheel-speed sensor (See FRONT ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION.) (See FRONT ABS WHEEL-SPEED SENSOR INSPECTION.)
3	Rear ABS wheel-speed sensor (See REAR ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION.) (See REAR ABS WHEEL-SPEED SENSOR INSPECTION.)
4	Combined sensor (See COMBINED SENSOR REMOVAL/INSTALLATION.) (See COMBINED SENSOR INSPECTION.) (See COMBINED SENSOR INITIALIZATION PROCEDURE.)
	Brake fluid pressure sensor (Built into DSC HU/CM)

5	(See BRAKE FLUID PRESSURE SENSOR INSPECTION.) (See BRAKE FLUID PRESSURE SENSOR INITIALIZATION PROCEDURE.)
6	Steering angle sensor (See STEERING ANGLE SENSOR REMOVAL/INSTALLATION.) (See STEERING ANGLE SENSOR INSPECTION.)
7	DSC OFF switch (See DSC OFF SWITCH INSPECTION.) (See DSC OFF SWITCH REMOVAL/INSTALLATION.)