

REAR ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION

B3E041543710W01

1. Remove or install the rear ABS wheel-speed sensor in the same order of vehicles with ABS. (See [REAR ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION](#).)