

# ABS WHEEL-SPEED SENSOR AND ABS SENSOR ROTOR FUNCTION

---

B3E041543720T01

- The ABS wheel-speed sensor detects and transmits the rotation condition of each wheel to the DSC HU/CM.
- The signal from the ABS wheel-speed sensors is the primary signal for DSC HU/CM control.