

FRONT ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION

B3E041543720W01

1. Remove or install the front ABS wheel-speed sensor in the same order of vehicles with ABS. (See [FRONT ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION](#).)