

## DSC HU PART FUNCTION

---

B3E041543750T02

- According to DSC CM signals, the DSC HU controls (on/off) each solenoid valve and the pump motor, adjusts fluid pressure in each caliper piston, and actuates each function (ABS, EBD (Electronic Brakeforce Distribution), TCS and DSC) of the DSC system.