


COMBINED SENSOR INITIALIZATION PROCEDURE

B3E041543770W03

Warning

- If the initialization procedure is not completed, the DSC will not operate properly and it might cause an unexpected accident. Therefore, after replacing or removing the combined sensor or DSC HU/CM, make sure to perform the initialization procedure to insure proper DSC operation.

1. Inspect the wheel alignment and the tire pressure.
 - If there is any malfunction, adjust the applicable part.
2. Position the vehicle on level ground.
3. Turn the ignition switch off.
4. Connect the WDS or equivalent to the DLC-2.

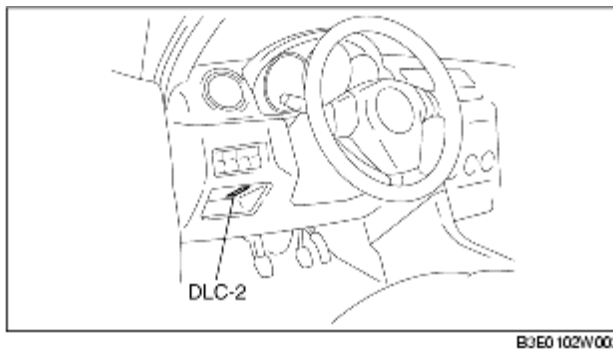

5. Access the active command mode, then select and perform the following commands.
 - LATACCEL (lateral acceleration)
6. Drive the vehicle.
7. After **5 min or more** of driving, verify that the DSC system is normal.