


BRAKE FLUID PRESSURE SENSOR INITIALIZATION PROCEDURE

B3E041543771W02

Warning

- If the initialization procedure is not completed, the DSC will not operate properly and it might cause an unexpected accident. Therefore, after replacing or removing the DSC HU/CM, make sure to perform the initialization procedure to insure proper DSC operation.

1. Turn the ignition switch off.
2. Connect the WDS or equivalent to the DLC-2.

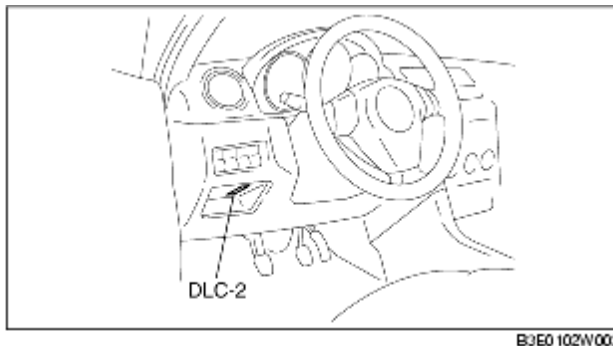

3. Access the active command mode, then select and perform the following commands.
 - MCYL_S_CAL (brake fluid pressure sensor)
4. Drive the vehicle.
5. After **5 min or more** of driving, verify that the DSC system is normal.