

DSC INDICATOR LIGHT FUNCTION

B3E041555430T01

The DSC indicator light, built into the instrument cluster, informs the driver of the following vehicle conditions.

- DSC is operating. (Vehicle side-slip condition.)
- TCS is operating. (Drive wheel is slipping.)
- TCS or DSC system malfunction.