


DSC INDICATOR LIGHT OPERATION

B3E041555430T02

- When the DSC and CAN lines are normal, the DSC indicator light illuminates for **approx. 3.0 s** when the ignition switch is turned to the ON position to check the light function. When the system is malfunctioning, the DSC indicator light remains illuminated.
- When the DSC or TCS is operating (DSC has not been disabled by pressing the DSC OFF switch), the DSC indicator light operates as follows:

DSC Indicator Light Operation

Item	DSC indicator light
TCS, DSC not operating	Not illuminated
TCS operating	Flashes (0.5 s intervals)
DSC operating	
TCS, DSC system malfunction	Illuminated

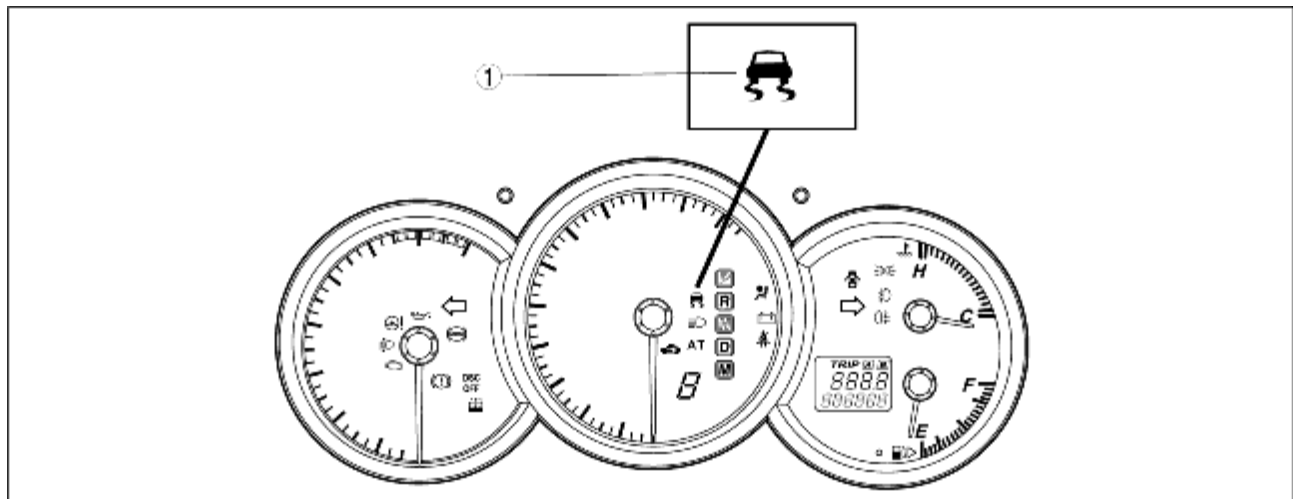

B3E04 15T027

1	DSC indicator light
---	---------------------