

STEERING ANGLE SENSOR REMOVAL/INSTALLATION

B3E041566120W01

1. When removing or installing the steering angle sensor, refer to the clock spring removal/installation procedure. (See [CLOCK SPRING REMOVAL/INSTALLATION](#).)