


# ON-BOARD DIAGNOSTIC (OBD) SYSTEM BLOCK DIAGRAM [FN4A-EL]

B3E050219090T02

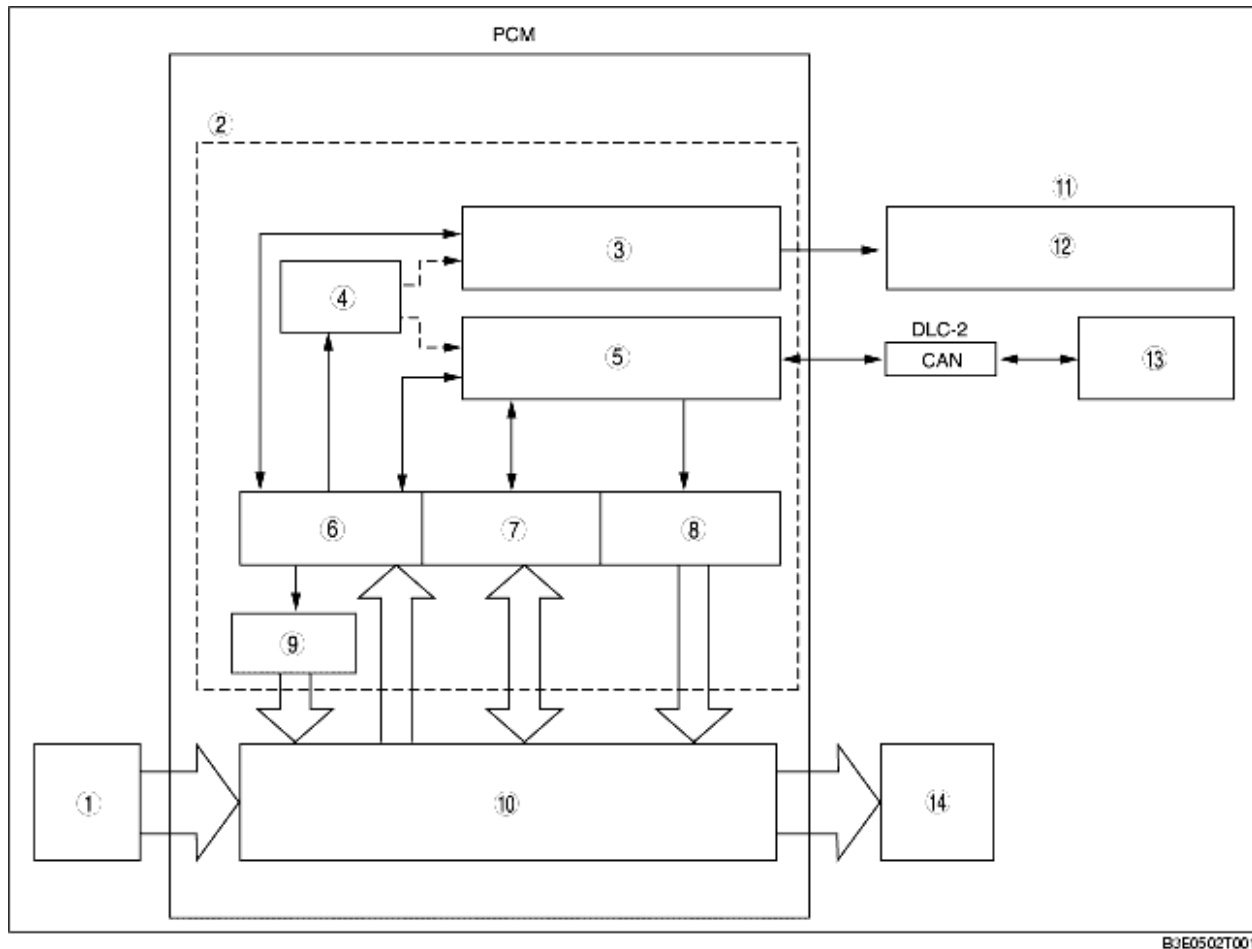

B3E0502T001

1	Input parts
2	OBD system
3	Malfunction indication function
4	Memory function
5	Serial communication
6	Malfunction detection function
7	PID data monitoring function
8	Simulation function
9	Fail-safe function
10	Transaxle control system
11	Instrument cluster
12	AT warning light or MIL
13	WDS or equivalent
14	Output parts