

## MALFUNCTION INDICATION FUNCTION [FN4A-EL]

---

B3E050219090T05

- The malfunction indication function illuminates the MIL or AT warning light when the malfunction detection function when it determines there is a malfunction.