


FOREWORD [FN4A-EL]

B3E050219090W02

• When the customer reports a vehicle malfunction, inspect the malfunction indicator lamp (MIL), AT warning light indication, and PCM memory for diagnostic trouble code (DTC), then diagnose the malfunction according to the following flowchart.

- If a DTC exists, diagnose the applicable DTC. (See [DTC TABLE \[FN4A-EL\]](#).)
- If no DTC exists, the MIL does not illuminate, and AT warning light does not illuminate. Diagnose the applicable symptom troubleshooting. (See [SYMPTOM TROUBLESHOOTING ITEM TABLE](#).)

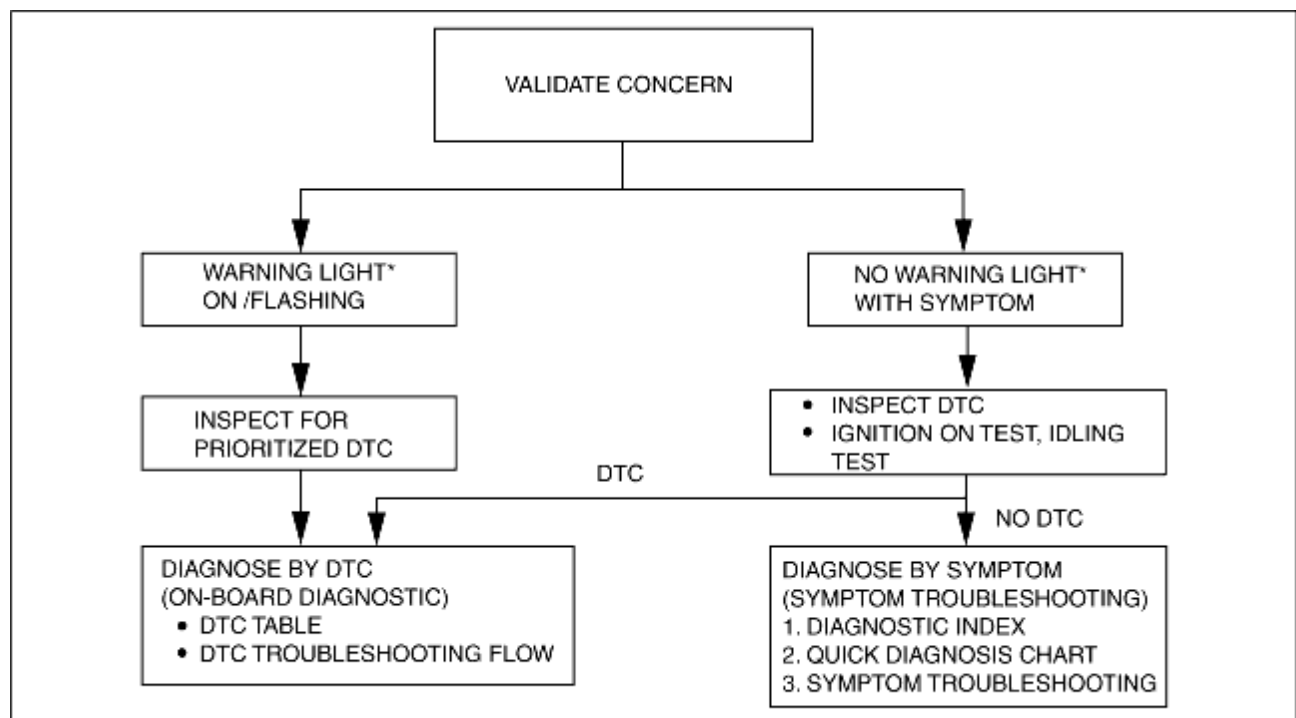

B3E0502W001

*: Malfunction indicator lamp (MIL), AT warning light