

AUTOMATIC TRANSAXLE ON-BOARD DIAGNOSTIC FUNCTION [FN4A-EL]

B3E050219090W03

DTC Reading Procedure

(See [ON-BOARD DIAGNOSTIC TEST \[ZJ, Z6\]](#).)

(See [ON-BOARD DIAGNOSTIC TEST \[LF\]](#).)