

NO.3 VEHICLE MOVES IN P POSITION, OR PARKING GEAR DOES NOT DISENGAGE WHEN P IS DISENGAGED

B3E050319090W07

3	Vehicle moves in P position, or parking gear does not disengage when P is disengaged
DESCRIPTION	<ul style="list-style-type: none">• Vehicle rolls on a downward slope in P position.• Tires are locked when P is disengaged. Vehicle does not move in D, M ranges, and R position when the accelerator pedal is depressed, and the engine remains in a stalled condition.
POSSIBLE CAUSE	<ol style="list-style-type: none">1. Parking mechanism malfunction (May have effect on noise or shock from transaxle)2. Improper adjustment of selector lever3. If vehicle moves in N position, perform No.2 "VEHICLE MOVES IN N POSITION"