

NO.4 EXCESSIVE CREEP

B3E050319090W08

| | |
|-----------------------|---|
| 4 | Excessive creep |
| DESCRIPTION | • Vehicle accelerates in D, M ranges and R position when accelerator pedal is not depressed. |
| POSSIBLE CAUSE | 1. Engine idle speed is high (transaxle system is not cause of problem) 2. Go to No.9 "FAST IDLE/RUNS ON" (See NO.9 FAST IDLE/RUNS ON [ZJ, Z6] .) (See NO.9 FAST IDLE/RUNS ON [LF] .) |