

## NO.11 SHIFT POINT IS HIGH OR LOW

---

B3E050319090W15

<b>11</b>	<b>Shift point is high or low</b>
<b>DESCRIPTION</b>	<ul style="list-style-type: none"><li>• Shift point considerably different from automatic shift diagram.</li><li>• Shift delays when accelerating.</li><li>• Shift occurs quickly when accelerating and engine speed does not increase.</li></ul>
<b>POSSIBLE CAUSE</b>	<ul style="list-style-type: none"><li>• If the transaxle does not shift abnormally, there is a malfunction of the input signal to the TP sensor, input/turbine speed sensor, or vehicle speed sensor (including sensor GND).</li><li>• If the engine speed is high or low, regardless of normal shifting, inspect the tachometer.</li><li>• Verify that the output signal of the TP sensor changes linearly.</li></ul>