

NO.13 NO KICKDOWN

B3E050319090W17

13	No kickdown
DESCRIPTION	• Does not downshift when accelerator pedal is fully depressed within kickdown range.
POSSIBLE CAUSE	• If transaxle does not downshift though shifting is normal, the malfunction is in the TP sensor circuit (including sensor GND, sensor wiring harness and connector).