

NO.15 ENGINE FLARES UP OR SLIPS WHEN ACCELERATING VEHICLE

B3E050319090W19

15	Engine flares up or slips when accelerating the vehicle
DESCRIPTION	<ul style="list-style-type: none">• Engine flares up when the accelerator pedal is depressed for upshifting.• Engine flares up suddenly when the accelerator pedal is depressed for downshifting.
POSSIBLE CAUSE	<ul style="list-style-type: none">• The malfunction is basically the same as for No.14 "ENGINE FLARES UP OR SLIPS WHEN UPSHIFTING OR DOWNSHIFTING". If conditions for No.14 worsen, the malfunction will develop to No.15.