

NO.26 STARTER DOES NOT WORK

B3E050319090W30

26	Starter does not work
DESCRIPTION	<ul style="list-style-type: none">• Starter does not work even when in P or N position.
POSSIBLE CAUSE	<ul style="list-style-type: none">• Selector lever mis-adjustment• TR switch mis-adjustment• Open or short circuit in the TR switch terminal