

NO.27 GEAR POSITION INDICATOR LIGHT DOES NOT ILLUMINATE IN M RANGE

B3E050319090W31

27	Gear position indicator light does not illuminate in M range
DESCRIPTION	<ul style="list-style-type: none"> Gear position indicator light in instrument cluster does not illuminate in M range with the ignition switch at ON.
POSSIBLE CAUSE	<ul style="list-style-type: none"> M range switch, gear position indicator light or related wiring harness malfunction <p>Note</p> <ul style="list-style-type: none"> Before following the troubleshooting steps, make sure that the Automatic Transaxle ON-Board Diagnostic and Automatic Transaxle Basic Inspection are conducted.

Diagnostic procedure

STEP	INSPECTION	ACTION
1	Do other indicator lights illuminate with the ignition switch at ON?	Yes
		No
2	Inspect the MNL SW PID value using the WDS or equivalent. Is the MNL SW PID value normal?	Yes
		No
3	<ul style="list-style-type: none"> Verify the test results. If normal, return to the diagnostic index to service any additional symptoms. If the malfunction remains, inspect the related Service information and perform repair or diagnosis. <ul style="list-style-type: none"> If the vehicle is repaired, troubleshooting is completed. If the vehicle is not repaired or additional diagnostic information is not available, replace the PCM. 	