


PILOT BEARING INSPECTION

B3E051011501W01

1. Without removing the pilot bearing, turn the bearing while applying force in the axial direction.

- If there is any malfunction, replace the pilot bearing.

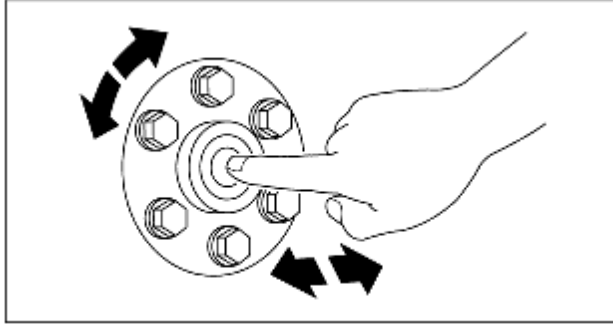

A0J4930W002