


CLUTCH LOCATION INDEX

B3E051016003W03

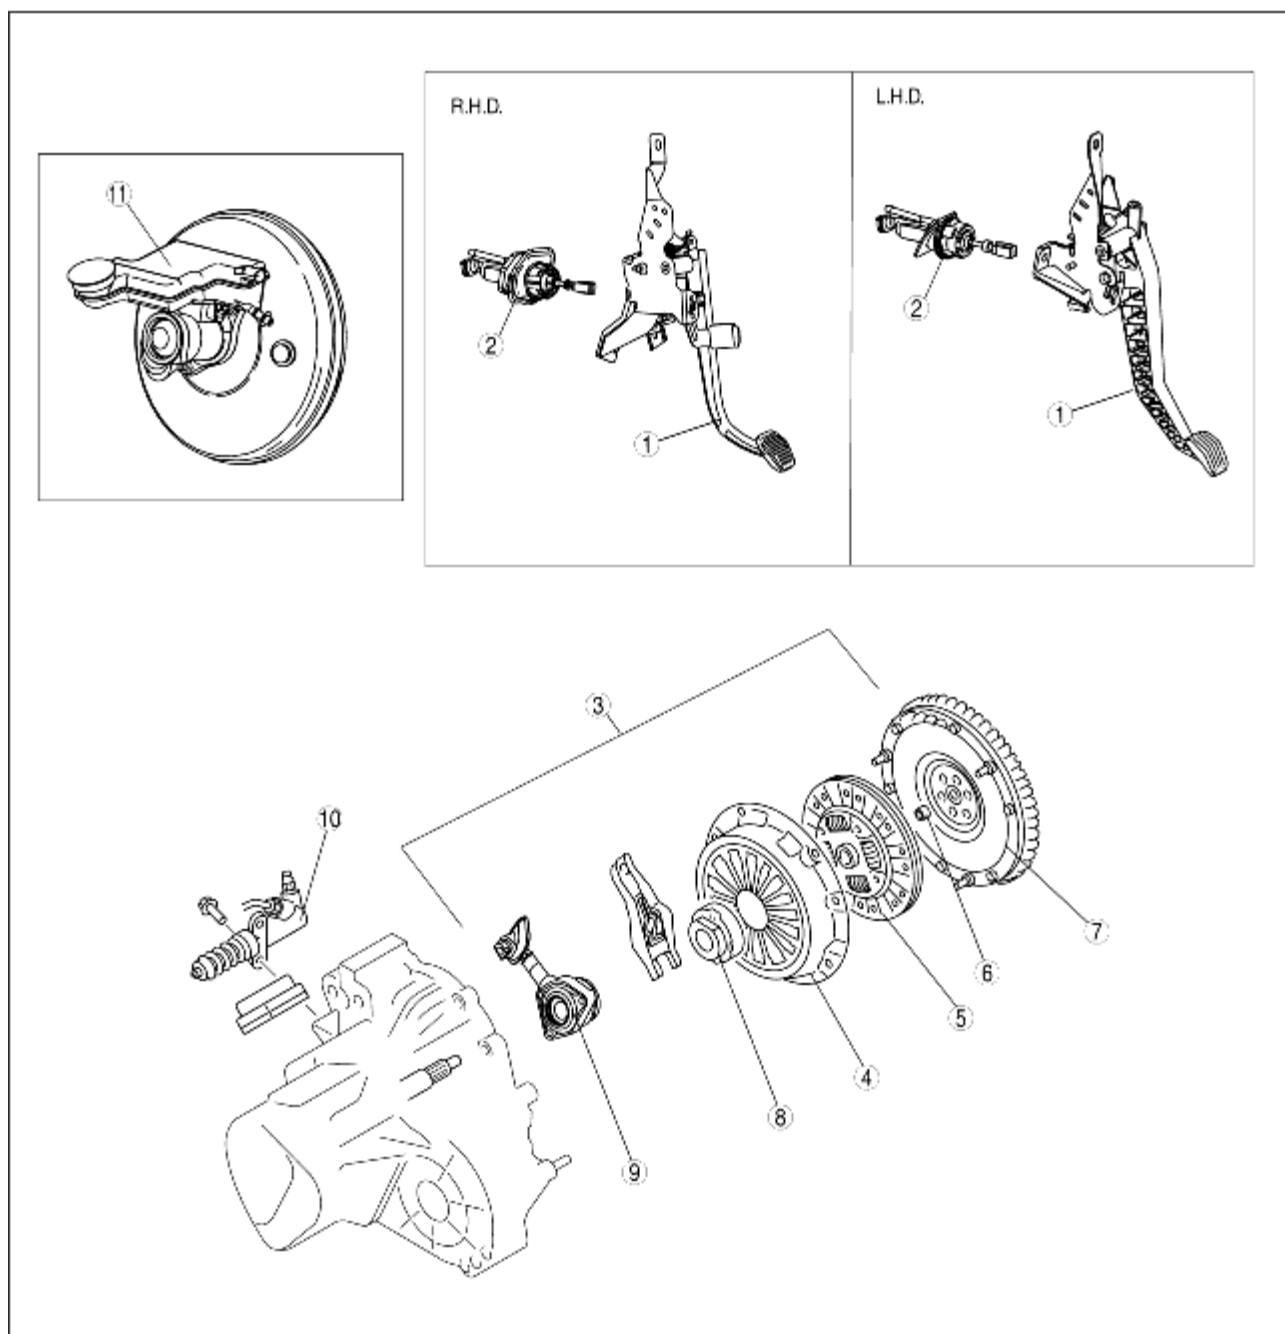

B3E051016003W03

1	Clutch pedal (See CLUTCH PEDAL INSPECTION.) (See CLUTCH PEDAL REMOVAL/INSTALLATION.)
2	Clutch master cylinder (See CLUTCH MASTER CYLINDER REMOVAL/INSTALLATION.)
3	Clutch unit (See CLUTCH UNIT REMOVAL/INSTALLATION.)

4	Clutch cover (See CLUTCH COVER INSPECTION.)
5	Clutch disc (See CLUTCH DISC INSPECTION.)
6	Pilot bearing (F35M-R, G35M-R) (See PILOT BEARING INSPECTION.)
7	Flywheel (See FLYWHEEL INSPECTION.)
8	Clutch release collar (F35M-R, G35M-R) (See CLUTCH RELEASE COLLAR INSPECTION.)
9	Clutch release cylinder assembly (J65M-R) (See CLUTCH RELEASE COLLAR INSPECTION.)
10	Clutch release cylinder (F35M-R, G35M-R) (See CLUTCH RELEASE CYLINDER REMOVAL/INSTALLATION.)
11	Clutch fluid (See CLUTCH FLUID INSPECTION.) (See CLUTCH FLUID REPLACEMENT.)