


# MANUAL TRANSAXLE CROSS-SECTIONAL VIEW [F35M-R]


B3E051501025T01

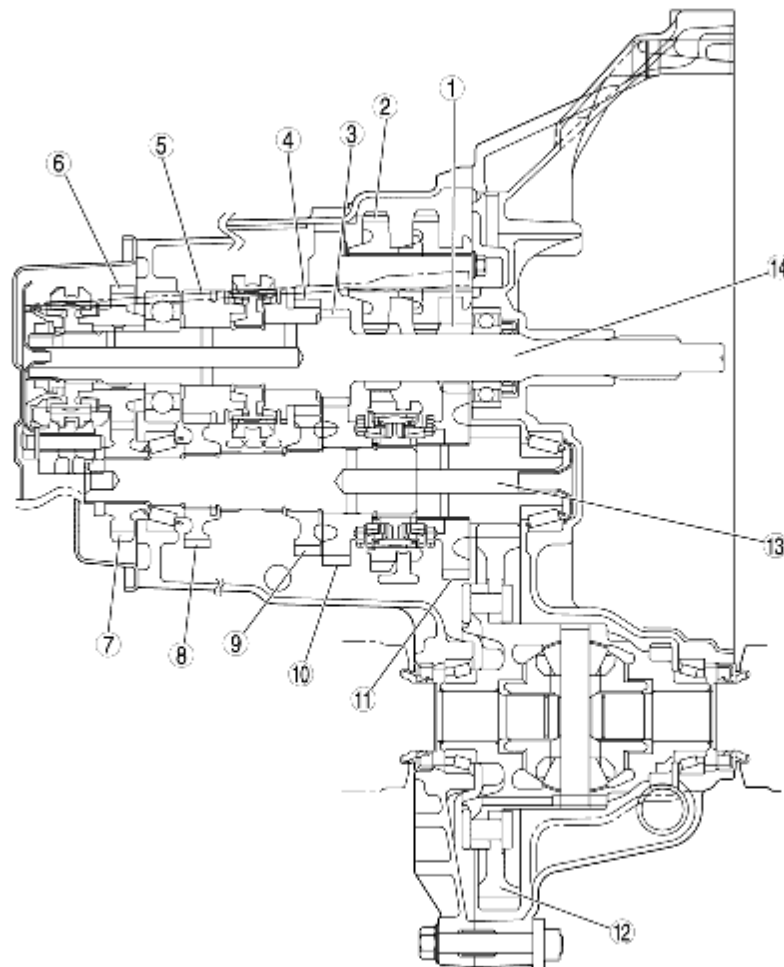

B3E05 15T001

1	1st gear
2	Reverse idler gear
3	2nd gear
4	3rd gear
5	4th gear

6	5th gear
7	Secondary 5th gear
8	Secondary 4th gear
9	Secondary 3rd gear
10	Secondary 2nd gear
11	Secondary 1st gear
12	Differential gear
13	Secondary shaft
14	Primary shaft

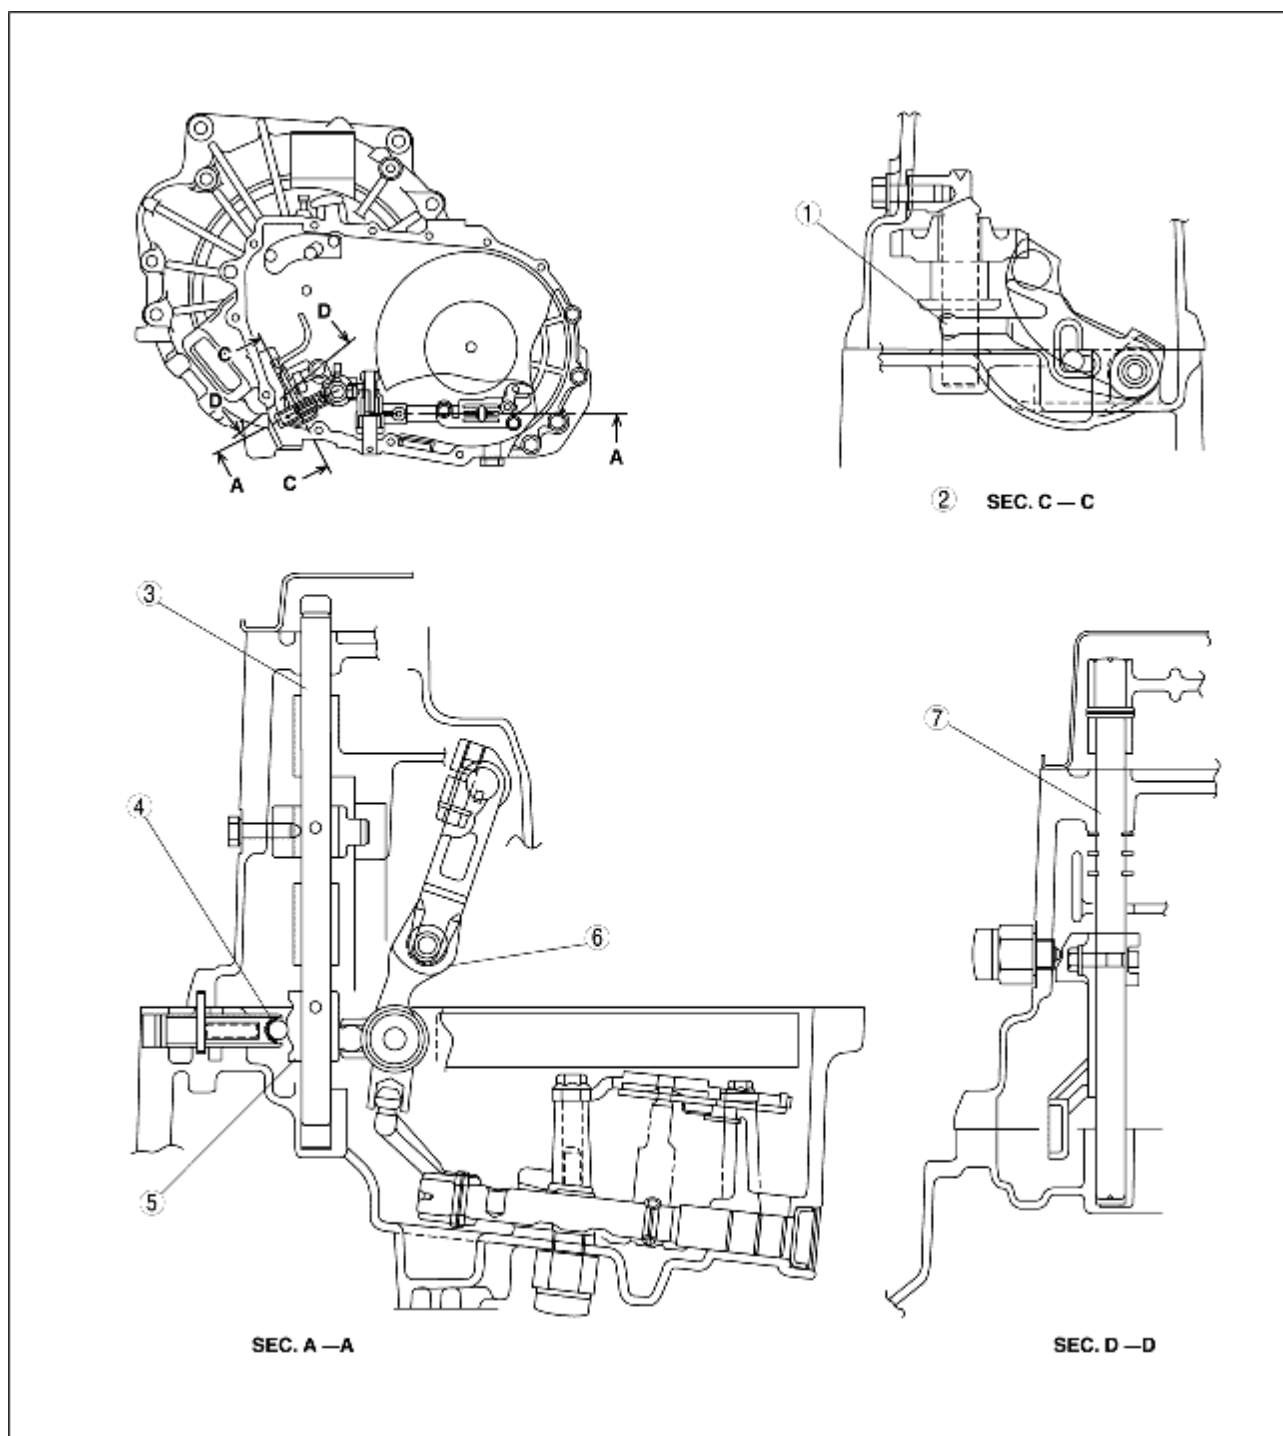

B3E05 15T002

1	Reverse lever
2	Reverse link parts
3	Control rod
4	Detent ball
5	Control rod end
6	Crank lever
7	Shift rod