


MANUAL TRANSAXLE CROSS-SECTIONAL VIEW [G35M-R]


B3E051501025T10

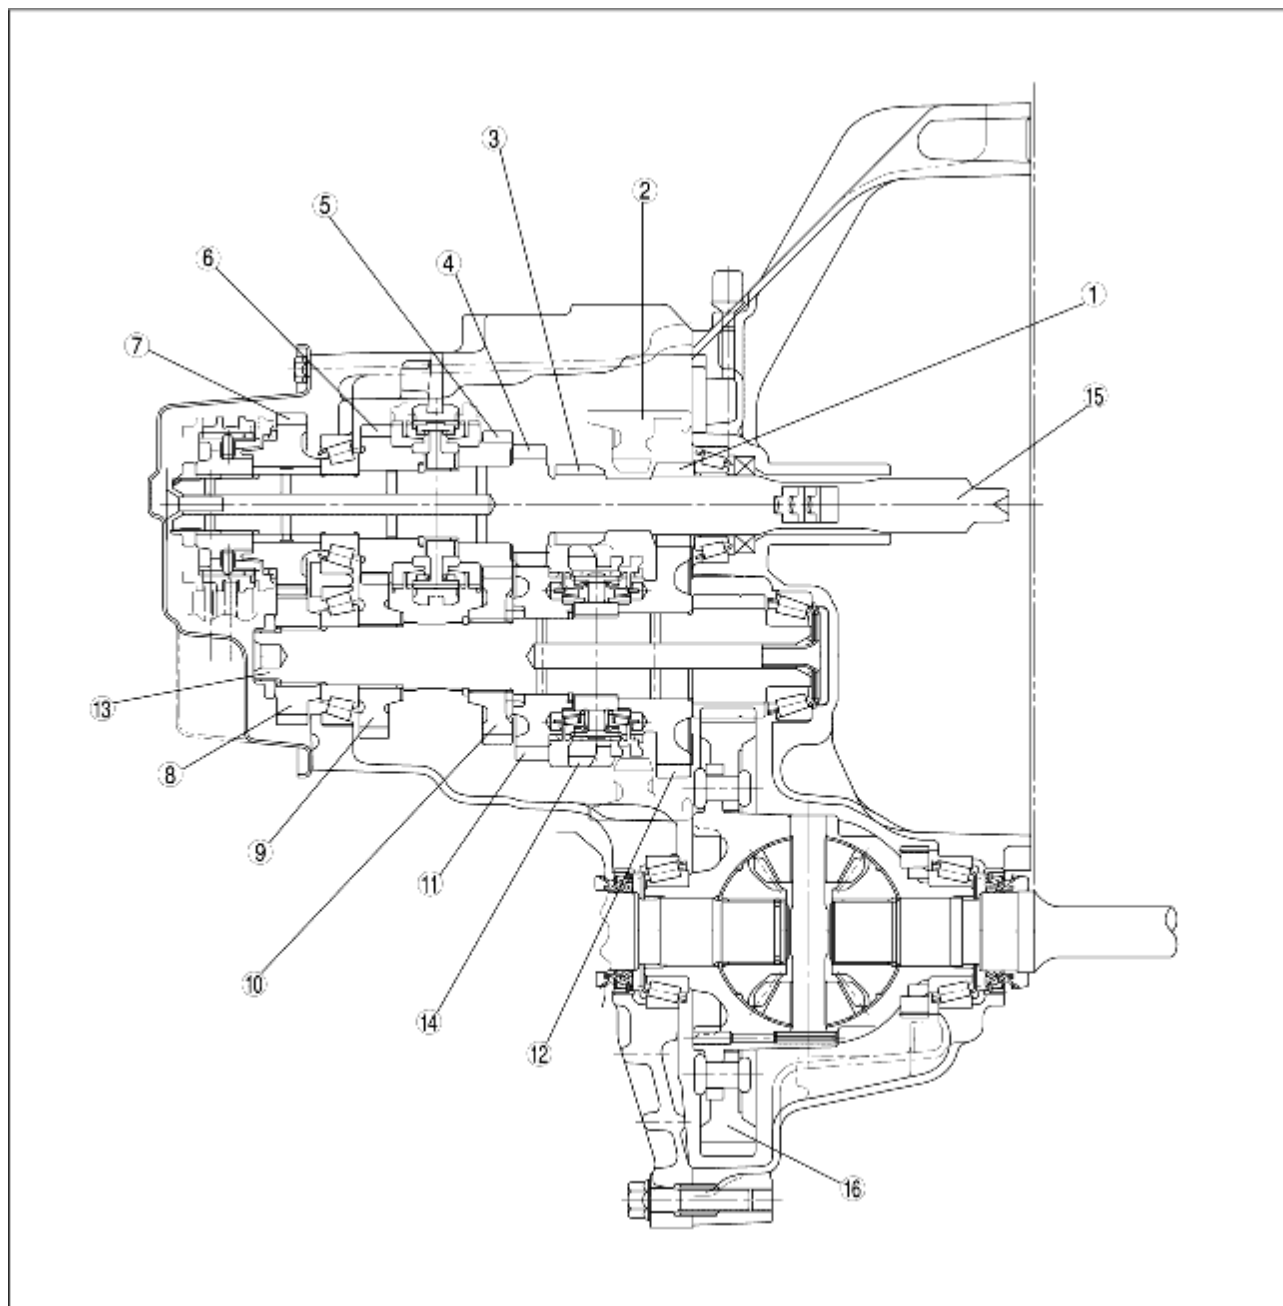

B3E05 15T014

1	1st gear
2	Reverse idler gear
3	Reverse gear
4	2nd gear
5	3rd gear

6	4th gear
7	5th gear
8	Secondary 5th gear
9	Secondary 4th gear
10	Secondary 3rd gear
11	Secondary 2nd gear
12	Secondary 1st gear
13	Secondary shaft
14	Clutch hub sleeve (reverse gear)
15	Primary shaft
16	Differential gear

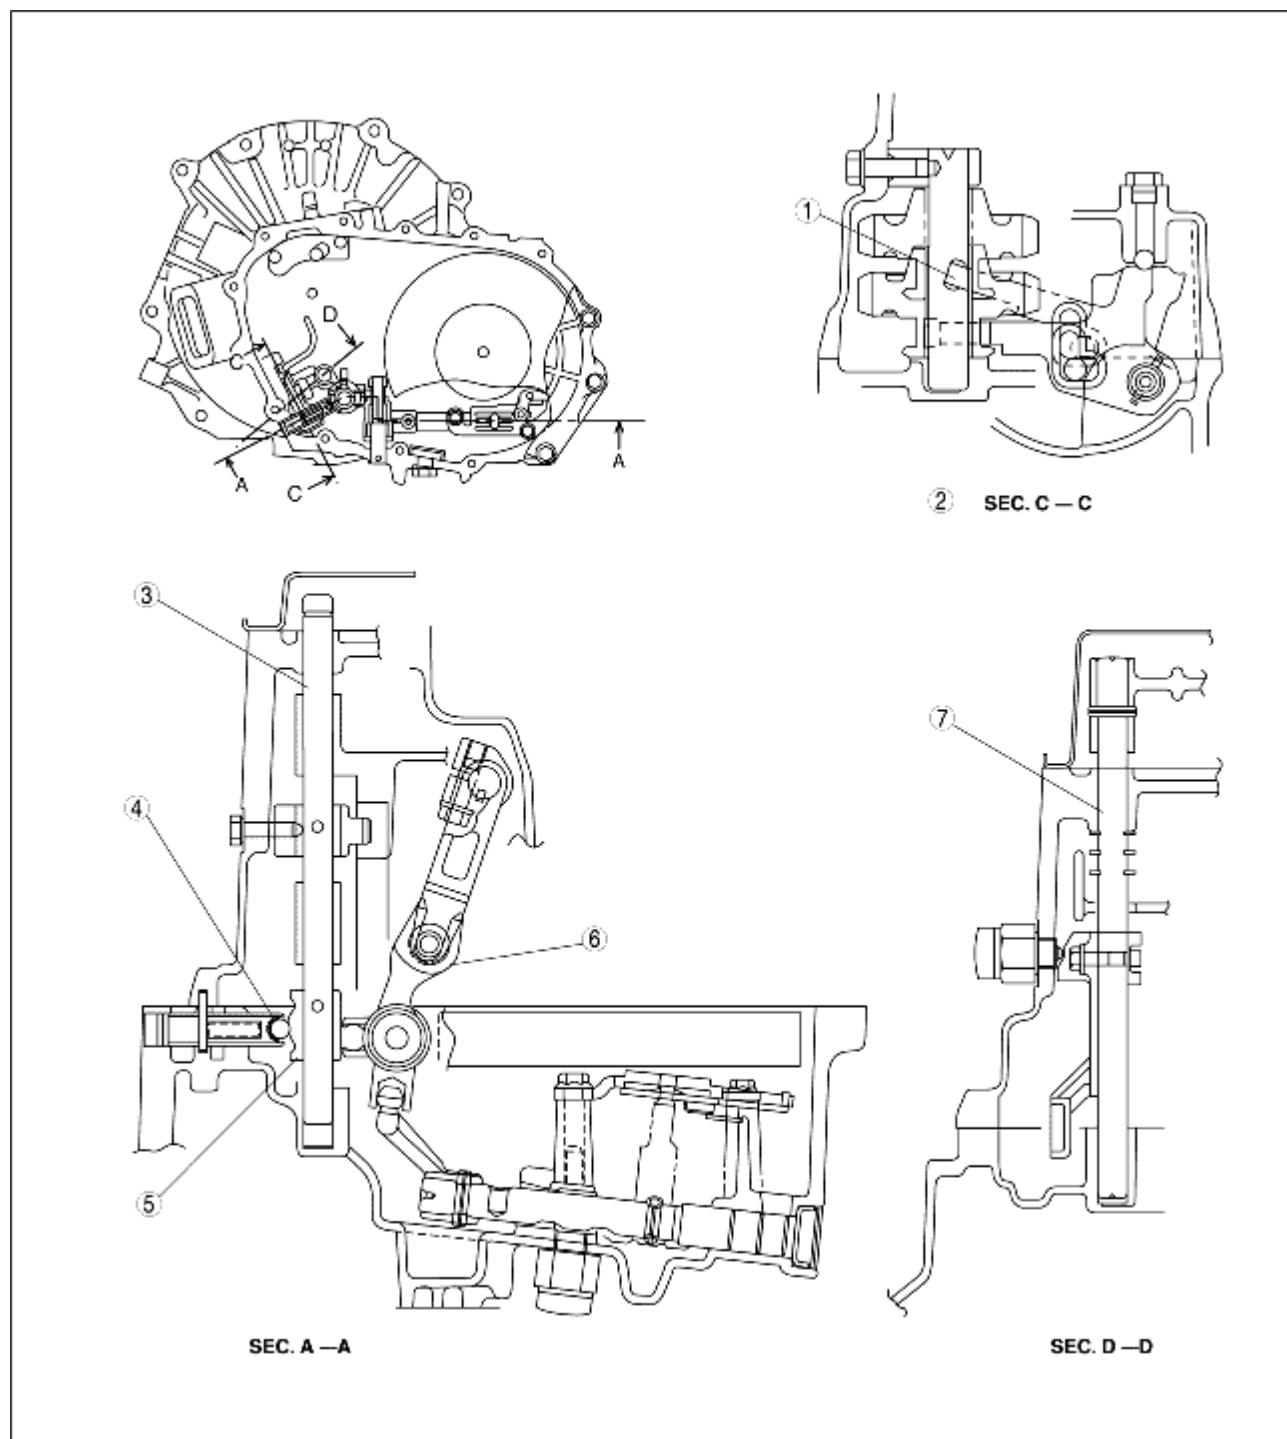

B3E0515T015

1	Reverse lever
2	Reverse link parts
3	Control rod
4	Detent ball
5	Control rod end
6	Crank lever
7	Shift rod