


# MANUAL TRANSAXLE POWER FLOW [G35M-R]

B3E051501025T11

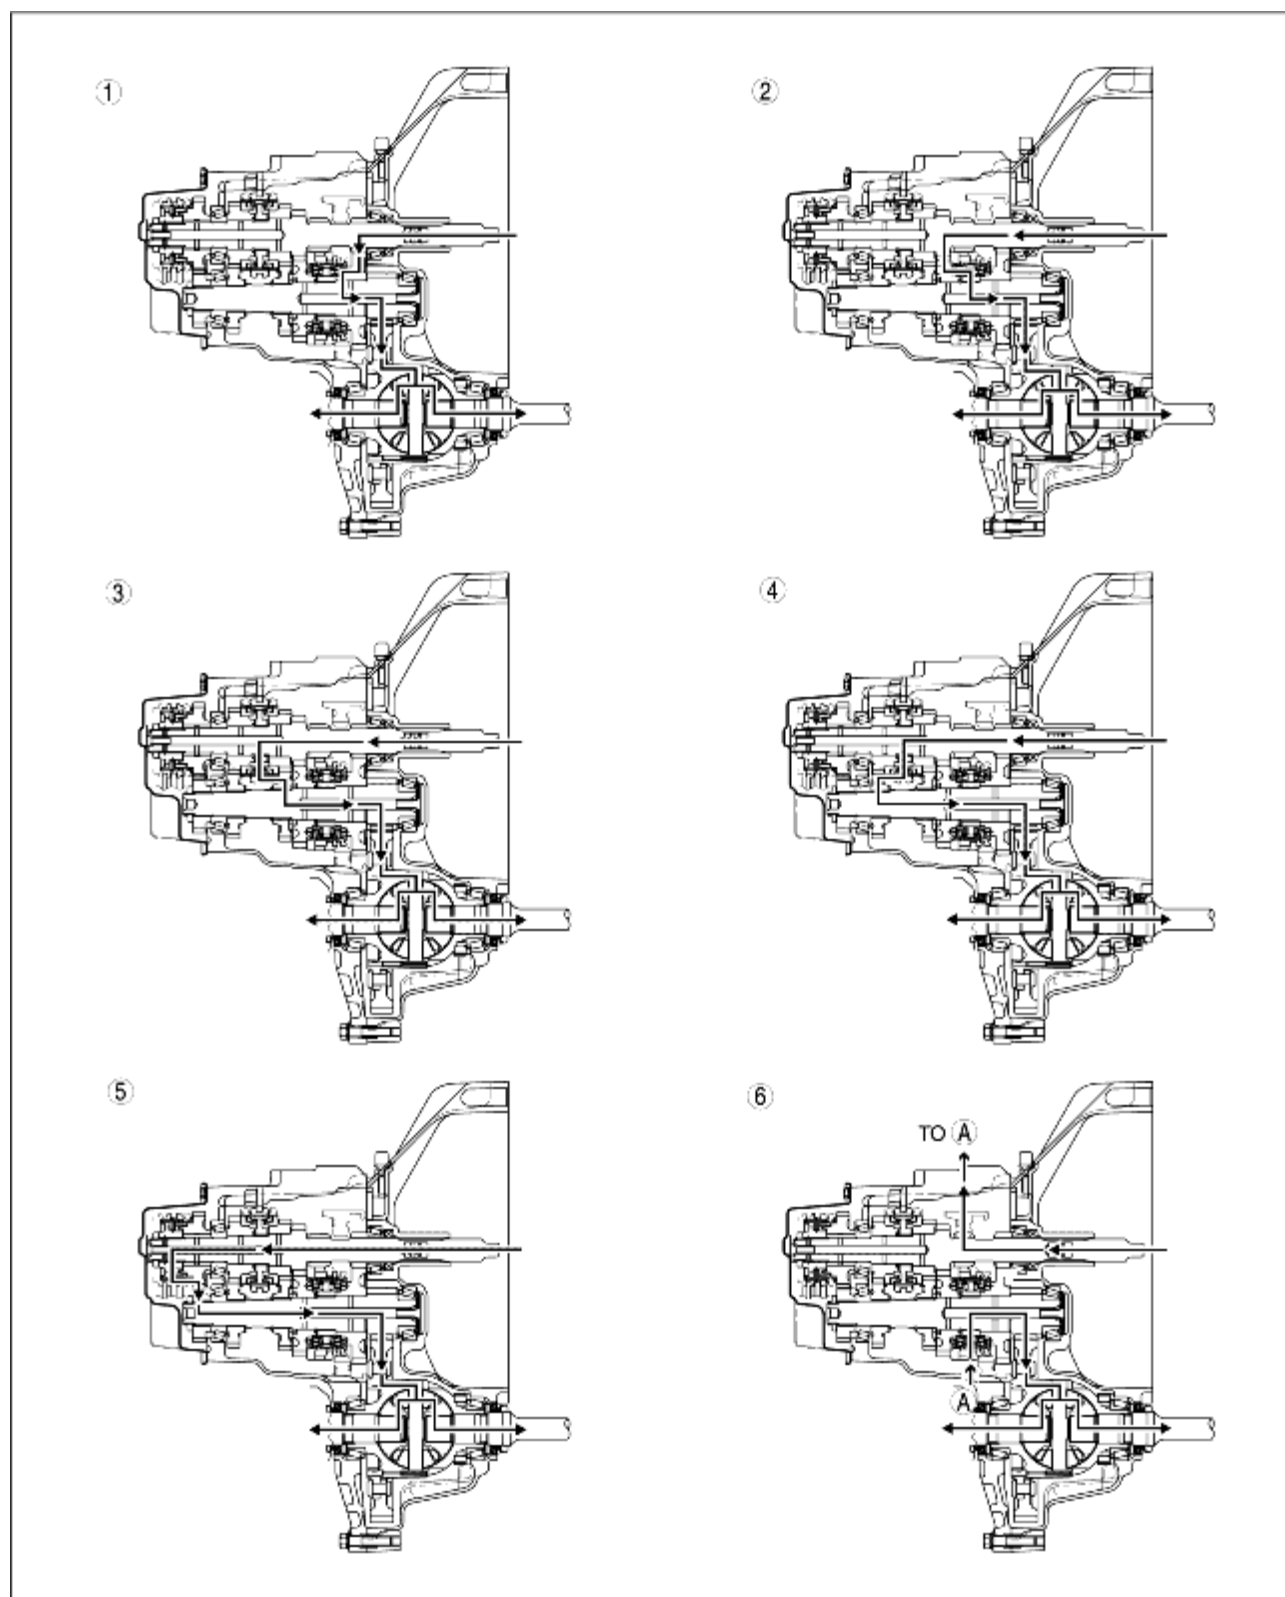

B3E0515T016

1	1st
2	2nd
3	3rd
4	4th
5	5th
6	Reverse