


MANUAL TRANSAXLE LOCATION INDEX [F35M-R]

B3E051501029W01

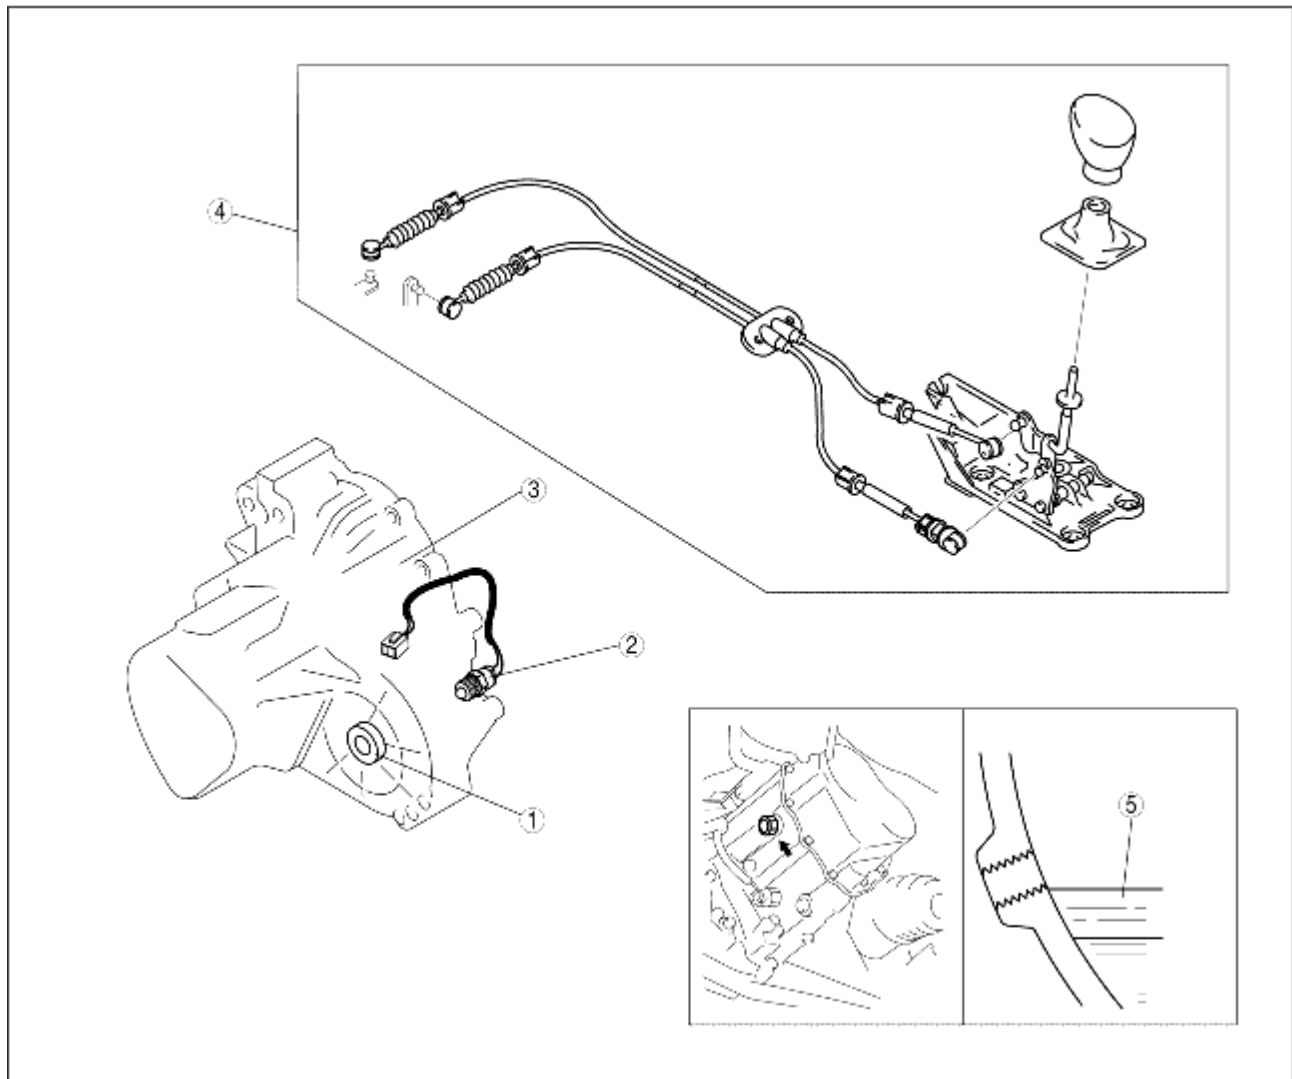

B3E0515W001

1	Oil seal (differential) (See OIL SEAL (DIFFERENTIAL) REPLACEMENT [F35M-R].)
2	Neutral switch (See NEUTRAL SWITCH REMOVAL/INSTALLATION [F35M-R].) (See NEUTRAL SWITCH INSPECTION [ZJ, Z6].)
3	Manual transaxle (See MANUAL TRANSAXLE REMOVAL/INSTALLATION [F35M-R].)
4	Shift mechanism (See SHIFT MECHANISM REMOVAL/INSTALLATION.)
5	Transaxle oil (See TRANSAXLE OIL INSPECTION [F35M-R].) (See TRANSAXLE OIL REPLACEMENT [F35M-R].)