


NEUTRAL SWITCH REMOVAL/INSTALLATION [F35M-R]

B3E051501029W02

1. Remove the under cover.
2. Remove the neutral switch.

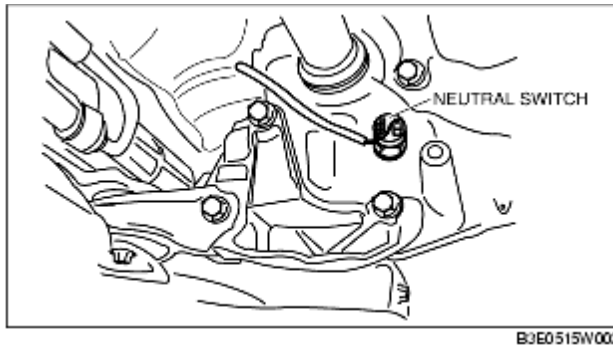

3. Install the neutral switch (with a new packing) to the transmission case.

Tightening torque**19.6-29.4 N·m****{2.0-2.9 kgf·m, 14.5-21.6 ft·lbf}**