


MANUAL TRANSAXLE LOCATION INDEX [G35M-R]

B3E051501029W05

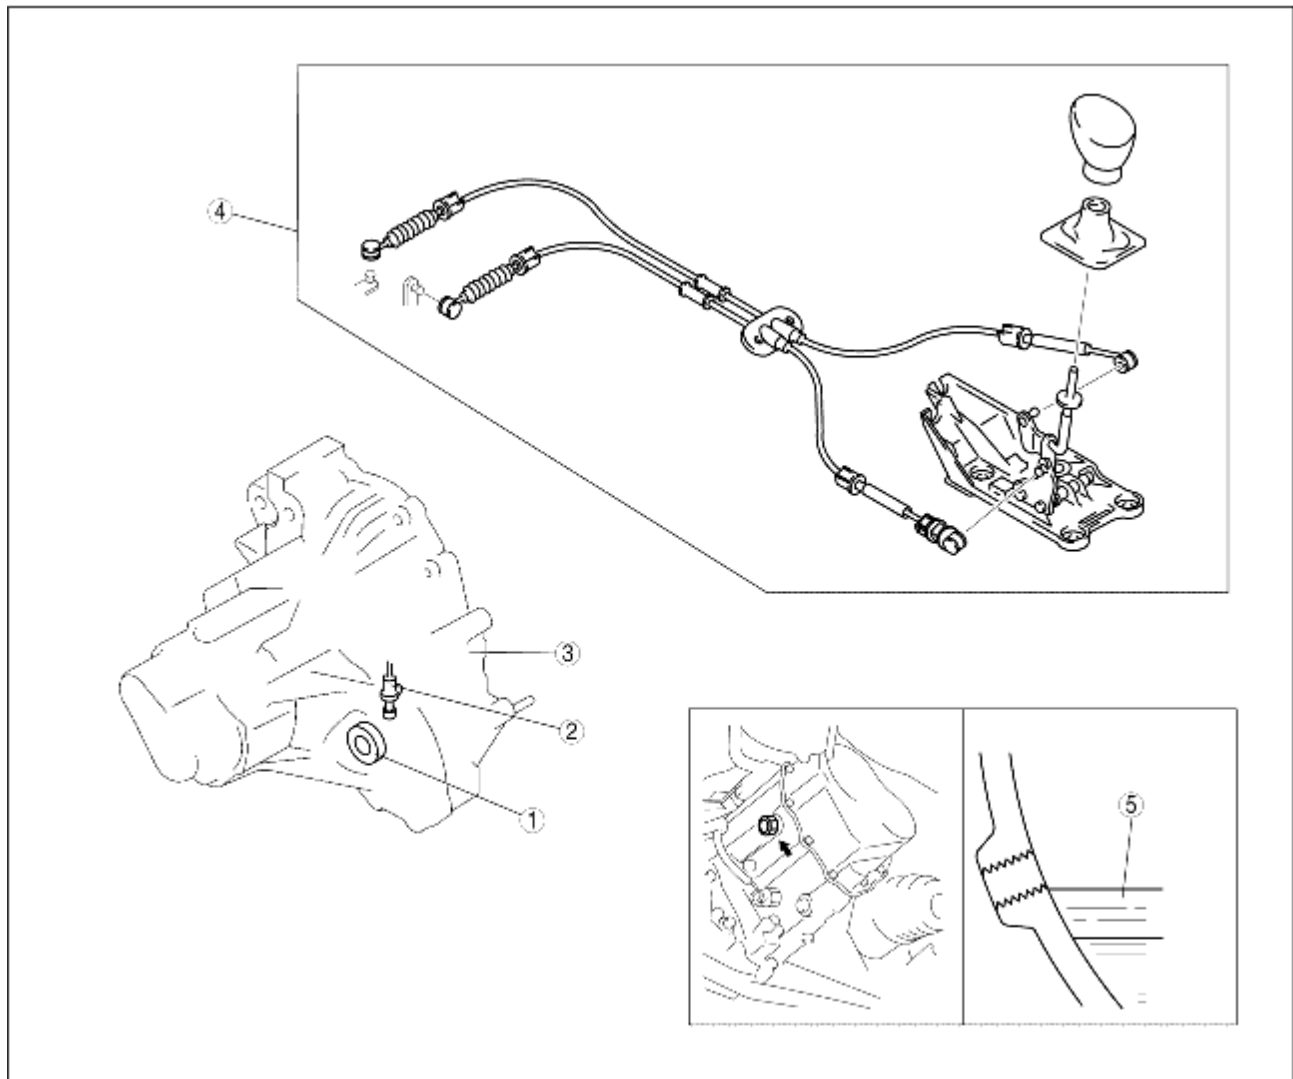

B3E5100W001

1	Oil seal (differential) (See OIL SEAL (DIFFERENTIAL) REPLACEMENT [G35M-R].)
2	Neutral switch (See NEUTRAL SWITCH REMOVAL/INSTALLATION [G35M-R].) (See NEUTRAL SWITCH INSPECTION [LF].)
3	Manual transaxle (See MANUAL TRANSAXLE REMOVAL/INSTALLATION [G35M-R].)
4	Shift mechanism (See SHIFT MECHANISM REMOVAL/INSTALLATION.)
5	Transaxle oil (See TRANSAXLE OIL INSPECTION [G35M-R].) (See TRANSAXLE OIL REPLACEMENT [G35M-R].)