


TRANSAXLE OIL INSPECTION [F35M-R]

B3E051527001W01

1. Park the vehicle on level ground.
2. Remove the oil level plug and washer.
3. Verify that the oil level is as shown in the figure.

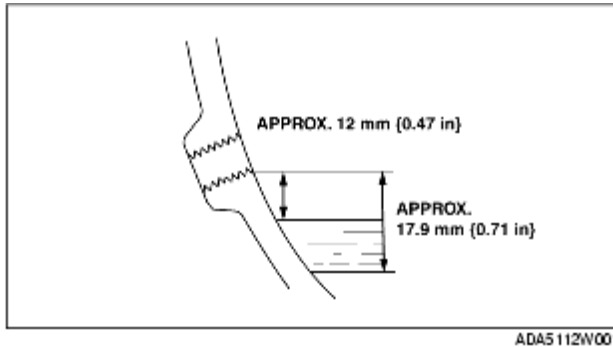

- If the oil level is lower than the low level, add the specified amount and type of oil through the oil level plug hole.

Oil grade**API Service GL-4 or GL-5****Oil viscosity****All-season: SAE 75W-90****Above 10 °C {50 °F}: SAE 80W-90**

4. Install a new washer and the oil level plug.

Tightening torque**39-59 N·m {4.0-6.0 kgf·m, 29-43 ft·lbf}**