

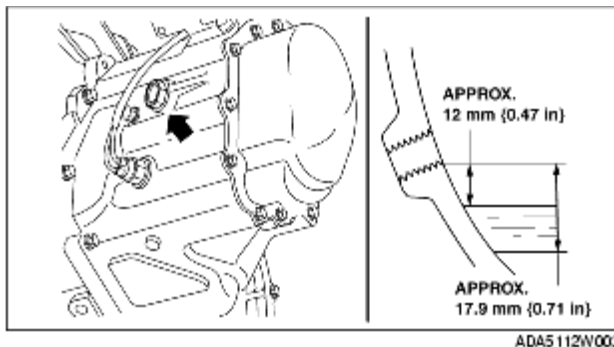
TRANSAXLE OIL REPLACEMENT [F35M-R]

B3E051527001W02

1. Park the vehicle on level ground.
2. Remove the drain plug with the washer.
3. Drain the oil into a suitable container.
4. Install a new washer and the drain plug.

Tightening torque**39-59 N·m {4.0-6.0 kgf·m, 29-43 ft·lbf}**

5. Remove the oil level plug with washer and add the specified amount and type of oil through the oil level plug hole until the level reaches as shown in the figure.

**Oil grade****API Service GL-4 or GL-5****Oil viscosity****All-season: SAE 75W-90****Above 10 °C {50 °F}: SAE 80W-90****Capacity (approx. quantity)****3.04 L {3.21 US qt, 2.67 Imp qt}**

6. Install a new washer and the oil level plug.

Tightening torque**39-59 N·m {4.0-6.0 kgf·m, 29-43 ft·lbf}**